

# REACTOR™ E-10

PLURAL COMPONENT PROPORTIONER

311075E

***For spraying or dispensing 1:1 mix ratio materials, including epoxies, polyurethane foam, and polyurea coatings. Not for use in explosive atmospheres.***




**Important Safety Instructions**

Read all warnings and instructions in this manual.  
Save these instructions.


See page 3 for a list of models and maximum working pressures.

**Nonheated Package,  
with 2K Ultra-Lite™ Gun  
and Cold Spray  
disposable mixer**

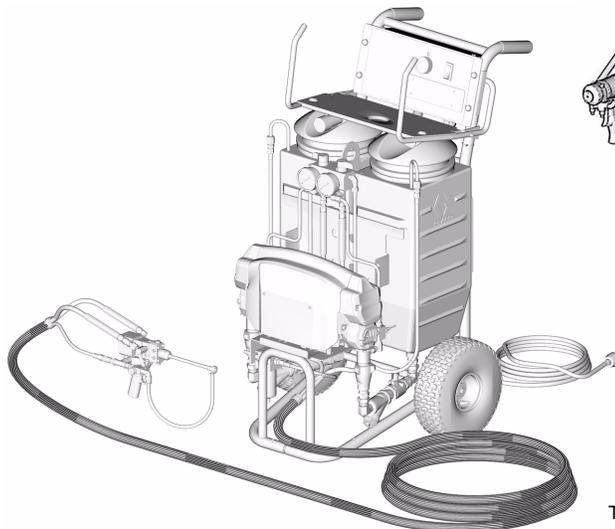

T16989b

**Heated Package,  
with Fusion™ Gun**

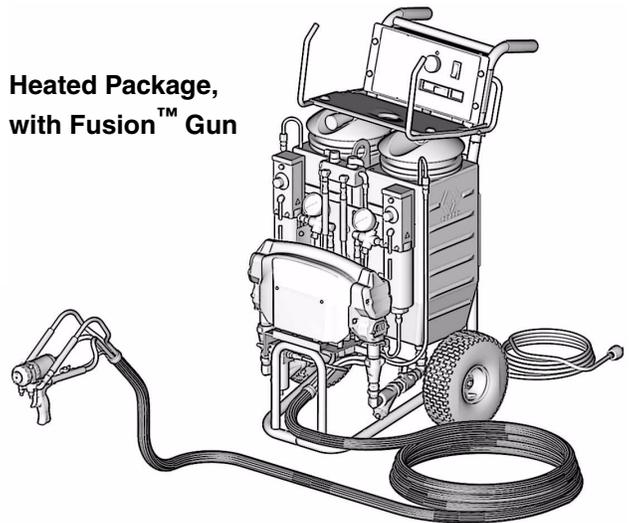

T16987b

PROVEN QUALITY. LEADING TECHNOLOGY.

# Contents

**Related Manuals** ..... 2

**Models** ..... 3

**Warnings** ..... 4

**Overview** ..... 6

**Isocyanate Hazard** ..... 7

**Foam Self-ignition** ..... 7

**Moisture Sensitivity of Isocyanates** ..... 7

**Keep Components A and B Separate** ..... 7

**Changing Materials** ..... 7

**Component Identification** ..... 8

**Controls and Indicators** ..... 10

    Motor/Pump Control Function Knob ..... 10

    STATUS Indicator ..... 10

    Motor Power Switch/Circuit Breaker ..... 10

    Heater Power Switch/Circuit Breaker ..... 11

    Heater Temperature Controls ..... 11

    Fluid Temperature Sensors and Displays ..... 11

**Setup** ..... 12

**Startup of Heated Units** ..... 17

    Heatup Guidelines ..... 18

    Heat Management Tips ..... 18

    Heating Foam Resins with 245 fa Blowing Agents  
    19

**Spraying/Dispensing** ..... 20

**Pause (Heated Units)** ..... 21

**Refilling Tanks** ..... 21

**Pressure Relief Procedure** ..... 22

**Shutdown** ..... 22

**Maintenance** ..... 23

**Flushing** ..... 24

**Troubleshooting** ..... 26

    Status Codes ..... 26

    Troubleshooting Chart ..... 28

**Repair** ..... 31

    Before Beginning Repair ..... 31

    Removing Supply Tanks ..... 31

    Recirc/Spray Valves ..... 32

    Displacement Pump ..... 33

    Control Module ..... 34

    Fluid Heaters (if supplied) ..... 38

    Pressure Transducers ..... 38

    Drive Housing ..... 39

    Cycle Counter Switch Replacement ..... 39

    Electric Motor ..... 40

    Motor Brushes ..... 41

    Fan ..... 41

**Parts** ..... 42

**Suggested Spare Replacement Parts** ..... 54

**Dimensions** ..... 55

**Technical Data** ..... 56

**Graco Standard Warranty** ..... 58

**Graco Information** ..... 58

# Related Manuals

The following manuals are for Reactor E-10 components and accessories. Some are supplied with your package, depending on its configuration. Part No. 15G777 Compact Disk includes all Reactor E-10 manuals. Manuals are also available at [www.graco.com](http://www.graco.com).

Displacement Pump	
Part No.	Description
311076	Instruction-Parts Manual (English)
Fluid Heater	
Part No.	Description
311210	Instruction-Parts Manual (English)
Fusion Air Purge Spray Gun	
Part No.	Description
309550	Instruction-Parts Manual (English)

Fusion Mechanical Purge Spray Gun	
Part No.	Description
309856	Instruction-Parts Manual (English)
2K Ultra-Lite Dispense Valve	
Part No.	Description
309000	Instruction-Parts Manual (English)
311230	2K Ultra-Lite Cold Spray and Joint Fill Kits (English)

# Models

The model no., series letter, and serial no. are located on the back of the Reactor E-10. For faster assistance, please have that information ready before calling Customer Service.

Package Part No., Series	Bare Proportioner Part No., Series	Volts	* Electrical Connection	Package Description	Application	Maximum Working Pressure, psi (MPa, bar)
249800, A	249570, A	120 V	15 A cord (motor) 15 A cord (heaters)	Heated Reactor E-10, insulated 5-hose bundle, Fusion™ Air Purge spray gun	<ul style="list-style-type: none"> <li>• Polyurethane Foam</li> <li>• Hot Polyureas</li> </ul>	2000 (14, 140)
249802, A	249571, A	240 V	10 A cord (motor) 10 A cord (heaters)	Heated Reactor E-10, insulated 5-hose bundle, Fusion™ Air Purge spray gun	<ul style="list-style-type: none"> <li>• Polyurethane Foam</li> <li>• Hot Polyureas</li> </ul>	2000 (14, 140)
249804, A	249572, A	240 V	20 A cord (motor and heaters)	Heated Reactor E-10, insulated 5-hose bundle, Fusion™ Air Purge spray gun	<ul style="list-style-type: none"> <li>• Polyurethane Foam</li> <li>• Hot Polyureas</li> </ul>	2000 (14, 140)
249806, A	249576, A	120 V	15 A cord (motor only)	Nonheated Reactor E-10, 3-hose bundle, 2K Ultra-Lite™ gun	<ul style="list-style-type: none"> <li>• Self-leveling Joint Fillers</li> <li>• Cold Polyureas</li> </ul>	2000 (14, 140)
249808, A	249577, A	240 V	10 A cord (motor only)	Nonheated Reactor E-10, 3-hose bundle, 2K Ultra-Lite™ gun	<ul style="list-style-type: none"> <li>• Self-leveling Joint Fillers</li> <li>• Cold Polyureas</li> </ul>	2000 (14, 140)

\* See page 13 for detailed electrical requirements.

# Warnings

The following general warnings are for the setup, use, grounding, maintenance, and repair of this equipment. Additional, more specific warnings may be found throughout the body of this manual where applicable. *Symbols appearing in the body of the manual refer to these general warnings. When these symbols appear throughout the manual, refer back to these pages for a description of the specific hazard.*

 <b>WARNING</b>	
	<p><b>ELECTRIC SHOCK HAZARD</b></p> <p>Improper grounding, setup, or usage of the system can cause electric shock.</p> <ul style="list-style-type: none"> <li>• Turn off and disconnect power cord before servicing equipment.</li> <li>• Use only grounded electrical outlets.</li> <li>• Use only 3-wire extension cords.</li> <li>• Ensure ground prongs are intact on sprayer and extension cords.</li> <li>• Do not expose to rain. Store indoors.</li> </ul>
	<p><b>TOXIC FLUID OR FUMES HAZARD</b></p> <p>Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.</p> <ul style="list-style-type: none"> <li>• Read MSDS's to know the specific hazards of the fluids you are using.</li> <li>• Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.</li> </ul>
	<p><b>PERSONAL PROTECTIVE EQUIPMENT</b></p> <p>You must wear appropriate protective equipment when operating, servicing, or when in the operating area of the equipment to help protect you from serious injury, including eye injury, inhalation of toxic fumes, burns, and hearing loss. This equipment includes but is not limited to:</p> <ul style="list-style-type: none"> <li>• Protective eyewear</li> <li>• Clothing and respirator as recommended by the fluid and solvent manufacturer</li> <li>• Gloves</li> <li>• Hearing protection</li> </ul>
	<p><b>SKIN INJECTION HAZARD</b></p> <p>High-pressure fluid from gun, hose leaks, or ruptured components will pierce skin. This may look like just a cut, but it is a serious injury that can result in amputation. <b>Get immediate surgical treatment.</b></p> <ul style="list-style-type: none"> <li>• Do not point gun at anyone or at any part of the body.</li> <li>• Do not put your hand over the spray tip.</li> <li>• Do not stop or deflect leaks with your hand, body, glove, or rag.</li> <li>• Do not spray without tip guard and trigger guard installed.</li> <li>• Engage trigger lock when not spraying.</li> <li>• Follow <b>Pressure Relief Procedure</b> in this manual, when you stop spraying and before cleaning, checking, or servicing equipment.</li> </ul>

 <b>WARNING</b>	
	<p><b>FIRE AND EXPLOSION HAZARD</b></p> <p>Flammable fumes, such as solvent and paint fumes, in <b>work area</b> can ignite or explode. To help prevent fire and explosion:</p> <ul style="list-style-type: none"> <li>• Use equipment only in well ventilated area.</li> <li>• Eliminate all ignition sources; such as pilot lights, cigarettes, portable electric lamps, and plastic drop cloths (potential static arc).</li> <li>• Keep work area free of debris, including solvent, rags and gasoline.</li> <li>• Do not plug or unplug power cords, or turn power or light switches on or off when flammable fumes are present.</li> <li>• Ground all equipment in work area. See <b>Grounding</b> instructions.</li> <li>• Use only grounded hoses.</li> <li>• Hold gun firmly to side of grounded pail when triggering into pail.</li> <li>• If there is static sparking or you feel a shock, <b>stop operation immediately</b>. Do not use equipment until you identify and correct the problem.</li> <li>• Keep a fire extinguisher in the work area.</li> </ul>
	<p><b>PRESSURIZED ALUMINUM PARTS HAZARD</b></p> <p>Do not use 1,1,1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents in pressurized aluminum equipment. Such use can cause serious chemical reaction and equipment rupture, and result in death, serious injury, and property damage.</p>
	<p><b>EQUIPMENT MISUSE HAZARD</b></p> <p>Misuse can cause death or serious injury.</p> <ul style="list-style-type: none"> <li>• Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See <b>Technical Data</b> in all equipment manuals.</li> <li>• Use fluids and solvents that are compatible with equipment wetted parts. See <b>Technical Data</b> in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request MSDS from distributor or retailer.</li> <li>• Check equipment daily. Repair or replace worn or damaged parts immediately with genuine Graco replacement parts only.</li> <li>• Do not alter or modify equipment.</li> <li>• Use equipment only for its intended purpose. Call your Graco distributor for information.</li> <li>• Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces.</li> <li>• Do not kink or over bend hoses or use hoses to pull equipment.</li> <li>• Keep children and animals away from work area.</li> <li>• Do not operate the unit when fatigued or under the influence of drugs or alcohol.</li> <li>• Comply with all applicable safety regulations.</li> </ul>
	<p><b>MOVING PARTS HAZARD</b></p> <p>Moving parts can pinch or amputate fingers and other body parts.</p> <ul style="list-style-type: none"> <li>• Keep clear of moving parts.</li> <li>• Do not operate equipment with protective guards or covers removed.</li> <li>• Pressurized equipment can start without warning. Before checking, moving, or servicing equipment, follow the <b>Pressure Relief Procedure</b> in this manual. Disconnect power or air supply.</li> </ul>
	<p><b>BURN HAZARD</b></p> <p>Equipment surfaces and fluid that's heated can become very hot during operation. To avoid severe burns, do not touch hot fluid or equipment. Wait until equipment/fluid has cooled completely.</p>

# Overview

The Reactor E-10 is a portable, electric-powered, 1:1 mix ratio proportioner, for use with a wide variety of coatings, foams, sealants, and adhesives. Materials must be self-leveling and pourable, and may be applied with impingement mix spray guns, disposable mixer guns, or flush-type mix manifolds.

Reactor E-10 is gravity-fed from 7 gal. (26.5 liter) supply tanks mounted on the unit. The tanks are translucent to allow monitoring of fluid level.

Severe duty, positive displacement reciprocating piston pumps meter fluid flow to the gun for mixing and applying. When set to recirculation mode, Reactor E-10 will circulate fluids back to the supply tanks.

Heated models include separate thermostatically controlled heaters for each fluid, and an insulated hose bundle with circulation return hoses. This allows the hoses and gun to be preheated to the desired temperature before spraying. Digital displays show the temperatures of the two fluids.

An electronic processor controls the motor, monitors fluid pressures, and alerts the operator if errors occur. See **STATUS Indicator**, page 10, for further information.

Reactor E-10 has two recirculation speeds, slow and fast, and an adjustable pressure output.

## Slow Recirculation

- Slow circulation results in a higher temperature transfer in the heater, so hoses and gun heat up quicker.
- Good for touchup or low flow spraying, up to moderate temperature.
- Not used to circulate full tanks up to temperature.
- Use with 245 fa blowing agent foams, to minimize heat returned to tank and reduce frothing.

## Fast Recirculation

- Use to support higher flow rates or higher temperatures by preheating the tanks.
- Agitates fluid within tanks, to avoid heating only the fluid at the top of the tank.
- Use for flushing.

## Pressure Adjust

Automatically maintains selected pressure output for dispensing or spraying.

## Isocyanate Hazard

						
<p>Read material manufacturer's warnings and material MSDS to know the specific hazards of isocyanates. Use equipment in a well-ventilated area. Wear respirator, gloves, and protective clothing when using isocyanates.</p>						

## Foam Self-ignition

						
<p>Some materials may become self-igniting if applied too thickly. Read material manufacturer's warnings and material MSDS.</p>						

## Moisture Sensitivity of Isocyanates

Isocyanates (ISO) are catalysts used in two component foam and polyurea coatings. ISO will react with moisture (such as humidity) to form small, hard, abrasive crystals, which become suspended in the fluid. Eventually a film will form on the surface and the ISO will begin to gel, increasing in viscosity. If used, this partially cured ISO will reduce performance and the life of all wetted parts.

 The amount of film formation and rate of crystallization varies depending on the blend of ISO, the humidity, and the temperature.

To prevent exposing ISO to moisture:

- Always use a sealed container with a desiccant dryer in the vent, or a nitrogen atmosphere. **Never** store ISO in an open container.
- Keep the felt washers in the pump wet-cups saturated with Graco ISO pump oil, Part No. 217374. The lubricant creates a barrier between the ISO and the atmosphere.
- Use moisture-proof hoses specifically designed for ISO, such as those supplied with your system (see page 49).

- Never use reclaimed solvents, which may contain moisture. Always keep solvent containers closed when not in use.
- Never use solvent on one side if it has been contaminated from the other side.
- Always park pumps when you shutdown, see page 22.
- Always lubricate threaded parts with Part No. 217374 ISO pump oil or grease when reassembling.

## Keep Components A and B Separate

CAUTION
<p>To prevent cross-contamination of the equipment's wetted parts, <b>never</b> interchange component A (isocyanate) and component B (resin) parts.</p>


## Changing Materials

- When changing materials, flush the equipment multiple times to ensure it is thoroughly clean.
- Always clean the fluid inlet strainers after flushing, see page 23.
- Check with your material manufacturer for chemical compatibility.
- Most materials use ISO on the A side, but some use ISO on the B side.
- Epoxies often have amines on the B (hardener) side. Polyureas often have amines on the B (resin) side.

# Component Identification

## Key for FIG. 1

- |   |   |   |   |
|---|---|---|---|
| A | Supply Tank A   | N | Desiccant Dryer (mounts on supply tank A) |
| B | Supply Tank B   | P | Recirculation Tubes                       |
| C | Pump A  | Q | Air Line Inlet (quick-disconnect fitting) |
| D | Pump B  | R | Outlet Hose Connections                   |
| E | Heater A  | S | Return Hose Connections                   |
| F | Heater B  | T | Fluid Temperature Sensors                 |
| G | Fluid Pressure Gauges                                     | U | Hose Rack and Control Shield              |
| H | Recirc/Spray and Overpressure Relief Valves               | V | Fluid Inlet Ball Valves (1 on each side)  |
| J | Control Panel; see FIG. 3, page 10                        | W | Fluid Inlet Strainers (1 on each side)    |
| K | Electric Motor and Drive Housings                         | X | Power Cord                                |
| L | Insulated Hose Bundle (includes circulation return hoses) | Y | Lift Ring                                 |
| M | Fusion Air Purge Spray Gun                                | Z | Air Filter/Moisture Separator             |

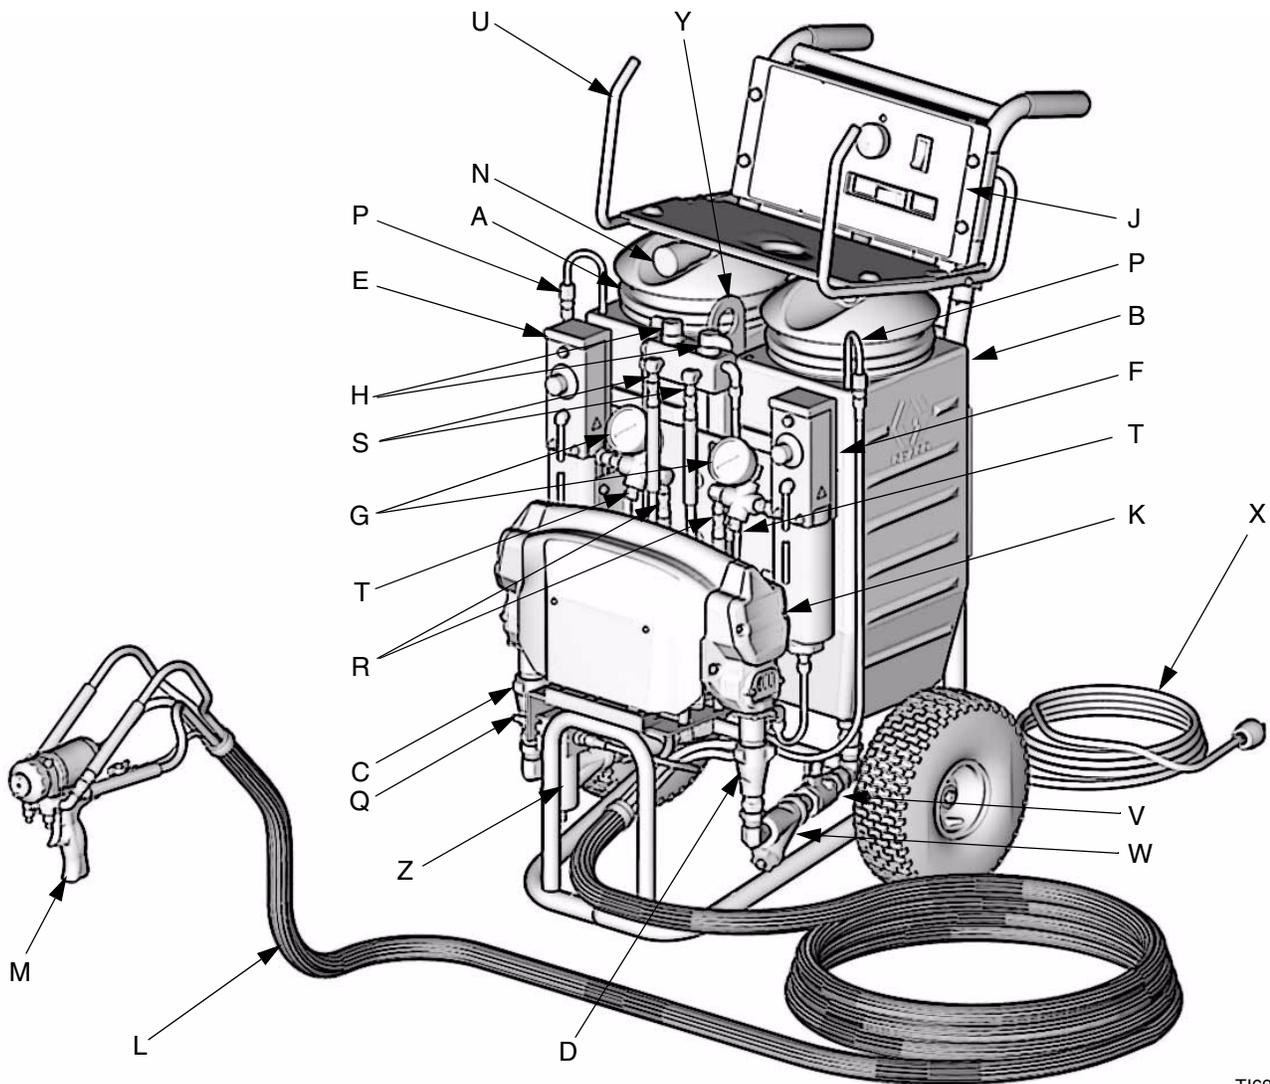


T16987b

FIG. 1: Component Identification, Heated Packages (Part No. 249804 Shown)

**Key for FIG. 2**


- |   |   |   |   |
|---|---|---|---|
| A | Supply Tank A   | N | Desiccant Dryer (mounts on supply tank A) |
| B | Supply Tank B   | P | Recirculation Tubes                       |
| C | Pump A  | Q | Air Line Inlet (quick-disconnect fitting) |
| D | Pump B  | R | Outlet Hose Connections                   |
| G | Fluid Pressure Gauges                                 | U | Hose Rack and Control Shield              |
| H | Recirc/Spray and Overpressure Relief Valves           | V | Fluid Inlet Ball Valves (1 on each side)  |
| J | Control Panel; see FIG. 3, page 10                    | W | Fluid Inlet Strainers (1 on each side)    |
| K | Electric Motor and Drive Housings                     | X | Power Cord                                |
| L | Hose Bundle   | Y | Lift Ring                                 |
| M | 2K Ultra-Lite Spray Gun, with disposable static mixer | Z | Air Filter/Moisture Separator             |

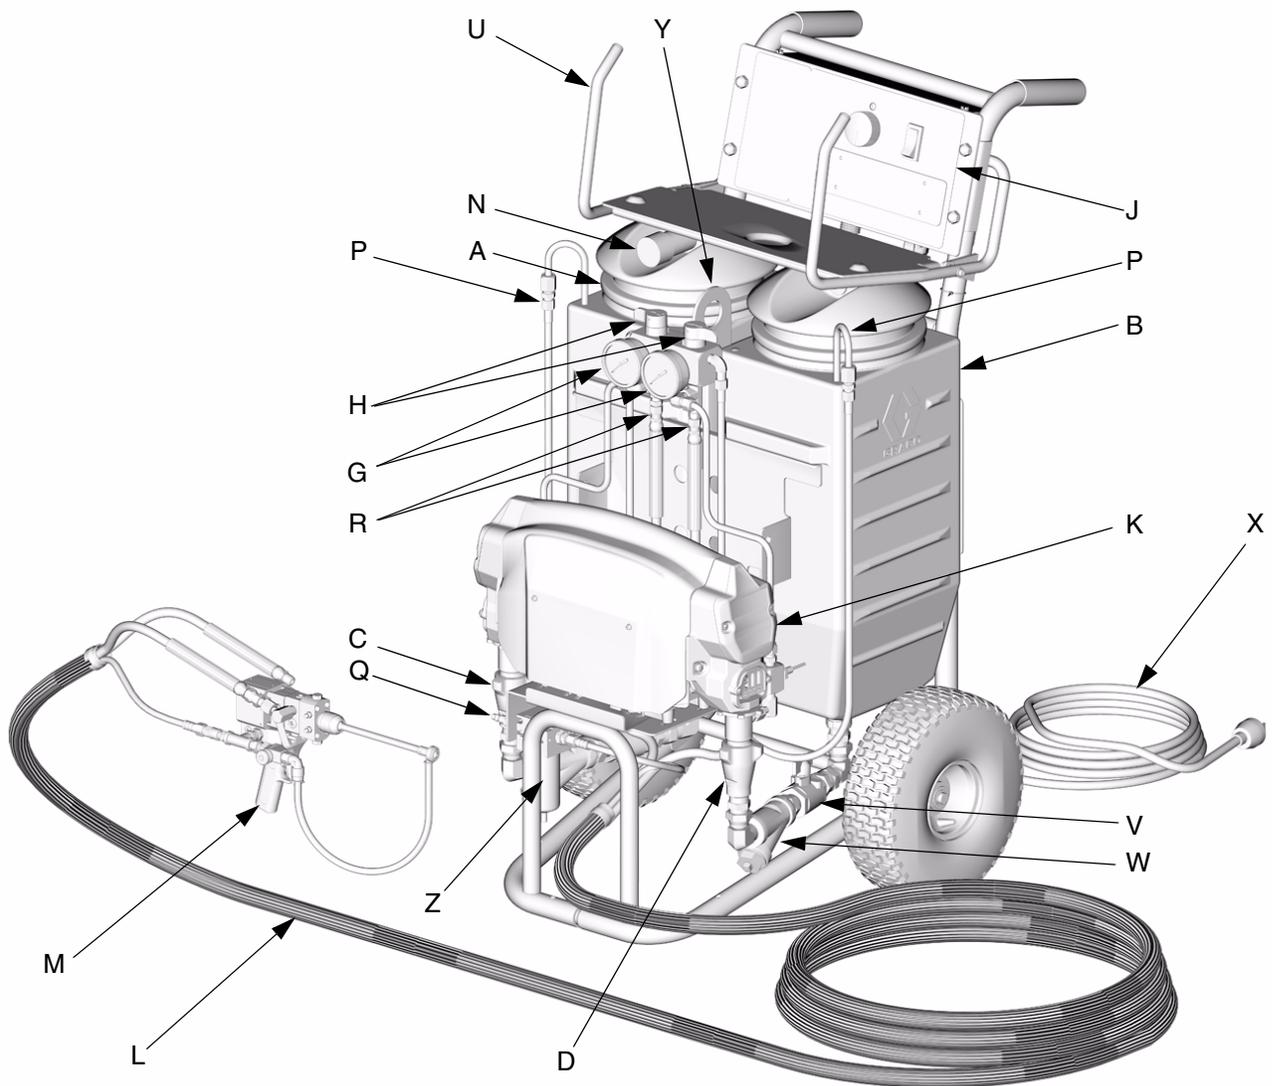

T16989b

**FIG. 2: Component Identification, Nonheated Packages (Part No. 249808 Shown)**

# Controls and Indicators

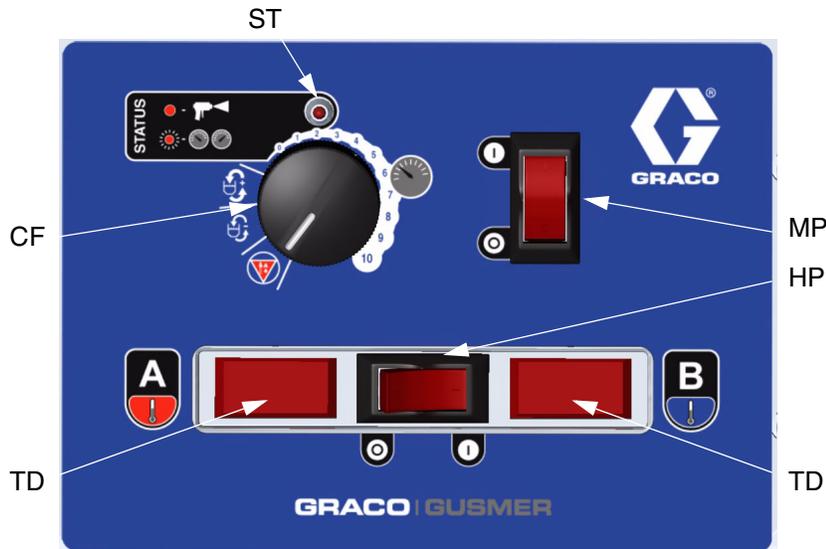

TI7016a

FIG. 3. Controls and Indicators (heated unit shown)

## Motor/Pump Control Function Knob

Use knob (CF) to select desired function.

Icon	Setting	Function
	Stop/Park	Stops motor and automatically parks pumps.
	Slow Recirc	Slow recirculation speed.
	Fast Recirc	Fast recirculation speed.
	Pressure Adjust	Adjusts fluid pressure to gun in spray mode.

## STATUS Indicator

- Indicator (ST) steady on: Motor Power switch is turned on and control board is working.
- Indicator (ST) blinking: If error occurs, STATUS indicator will blink 1 to 7 times to indicate status code, pause, then repeat. See TABLE 1 for a brief description of status codes. For more detailed information and corrective action, see page 26.

Table 1: Status Codes  
(see also the label on back of the control enclosure)

Code No.	Code Name
1	Pressure imbalance between A and B sides
2	Unable to maintain pressure setpoint
3	Pressure transducer A failure
4	Pressure transducer B failure
5	Excessive current draw
6	High motor temperature
7	No cycle counter switch input

The default is to shut down if a status code indication occurs. Codes 1 and 2 may be set to disable automatic shutdown if desired; see page 26. The other codes are not settable.

## Motor Power Switch/Circuit Breaker

Switch (MP) turns power on to control board and function knob. The switch includes a 20 A circuit breaker.

## Heater Power Switch/Circuit Breaker

See FIG. 3. Switch (HP) turns power on to heater thermostats. The switch includes a 20 A circuit breaker. Present on heated units only.


## Heater Temperature Controls

See FIG. 4. Control knobs (HC) set temperature of component A and B heaters. Indicator lights (HL) turn on when thermostats are heating, and off when heater reaches setpoint. Present on heated units only.

## Fluid Temperature Sensors and Displays

See FIG. 3. Fluid temperature sensors (T) monitor actual temperature of component A and B fluid going to spray gun. Temperatures are then displayed (TD). Present on heated units only.

Unit is shipped set to °F. To change to °C, see page 34.

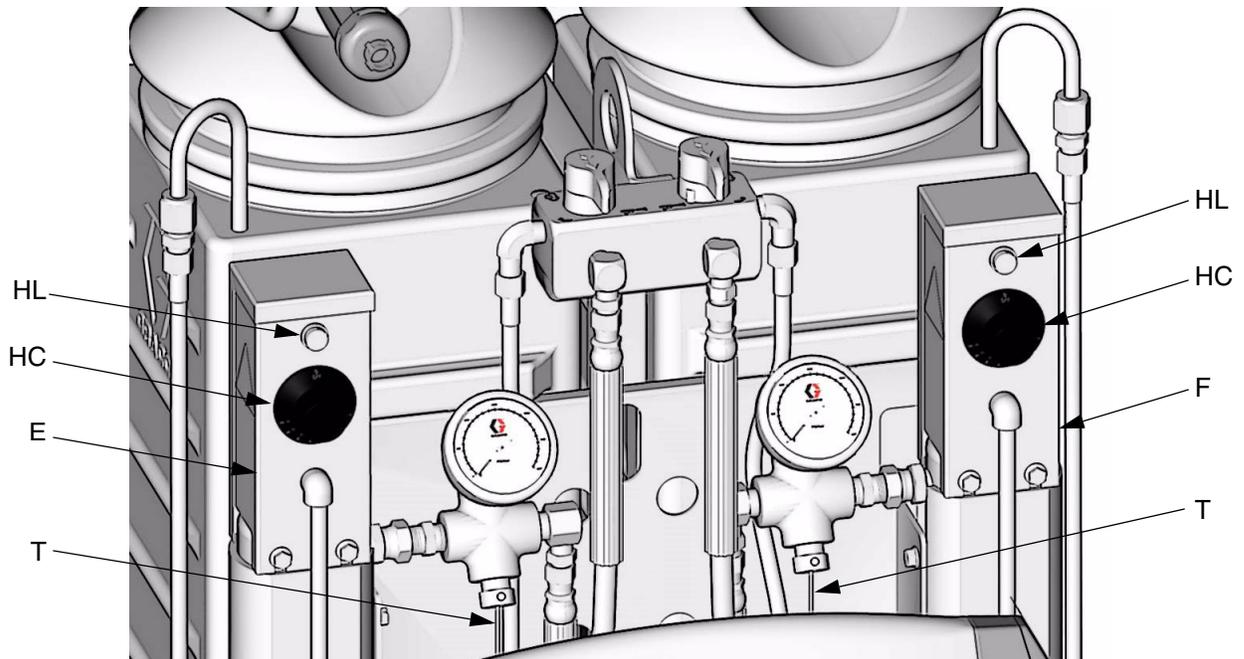

T16984a

**FIG. 4. Heater Temperature Controls**

# Setup

## 1. Locate Reactor E-10

- a. Locate Reactor E-10 on a level surface.
- b. Do not expose Reactor E-10 to rain.

## 2. Electrical requirements

						
<p>Improper wiring may cause electric shock or other serious injury if work is not performed properly. Have a qualified electrician perform any electrical work. Be sure your installation complies with all National, State and Local safety and fire codes.</p>						

Connect Reactor E-10 to the correct power source for your model. See TABLE 2. Models with two power cords must be connected to two separate, dedicated circuits. See FIG. 5.

Some models include cord adapters (55, 56) for use outside North America. Connect the appropriate adapter to the unit's power cord before connecting to your power source.

## 3. Ground system

The equipment must be grounded. Grounding reduces the risk of static and electric shock by providing an escape wire for the electrical current due to static build up or in the event of a short circuit.

						
---	---	---	--	--	--	--

- a. *Reactor E-10*: grounded through power cord.
- b. *Generator (if used)*: follow your local code. Start and stop generator with power cord(s) disconnected.
- c. *Spray gun*: grounded through the supplied fluid hoses, connected to a properly grounded Reactor E-10. Do not operate without at least one grounded fluid hose.
- d. *Object being sprayed*: follow your local code.
- e. *Solvent pails used when flushing*: follow your local code. Use only metal pails, which are conductive, placed on a grounded surface. Do not place pail on a nonconductive surface, such as paper, plastic, or cardboard, which interrupts grounding continuity.
- f. *To maintain grounding continuity when flushing or relieving pressure*, hold a metal part of spray gun firmly to the side of a grounded *metal* pail, then trigger gun.

**Table 2: Electrical Requirements**

Model	Required Power Source	Power Cord Connector
120 V, 1 phase, 50/60 Hz, two 15 ft (4.5 m) power cords, Heated	Two separate, dedicated circuits rated at minimum of 15 A each	  Two NEMA 5-15T
240 V, 1 phase, 50/60 Hz, two 15 ft (4.5 m) power cords, Heated	Two separate, dedicated circuits rated at minimum of 10 A each	  Two IEC 320, with two local adapters:  Euro CEE74 Adapter  Australia/China Adapter
240 V, 1 phase, 50/60 Hz, one 15 ft (4.5 m) power cord, Heated	Single dedicated circuit rated at minimum of 16 A	 One NEMA 6-20P
120 V, 1 phase, 50/60 Hz, one 15 ft (4.5 m) power cord, Nonheated	Single dedicated circuit rated at minimum of 15 A	 One NEMA 5-15T
240 V, 1 phase, 50/60 Hz, one 15 ft (4.5 m) power cord, Nonheated	Single dedicated circuit rated at minimum of 8 A	 One NEMA 6-20P

**Table 3: Extension Cord Requirements**


Model	Required Wire Size	
	Up to 50 ft (15 m)	Up to 100 ft (30 m)
Nonheated and two cord heated models	AWG 14	AWG 12
Single cord heated model	AWG 12	AWG 10

 Cords must be 3-conductor grounded, rated for your environment.




To avoid electric shock, always unplug both cords before servicing Reactor E-10.

-  Ensure no other high amp loads are connected while running Reactor E-10.
-  To verify separate circuits, plug in Reactor E-10 or a worklight and cycle breakers on and off.

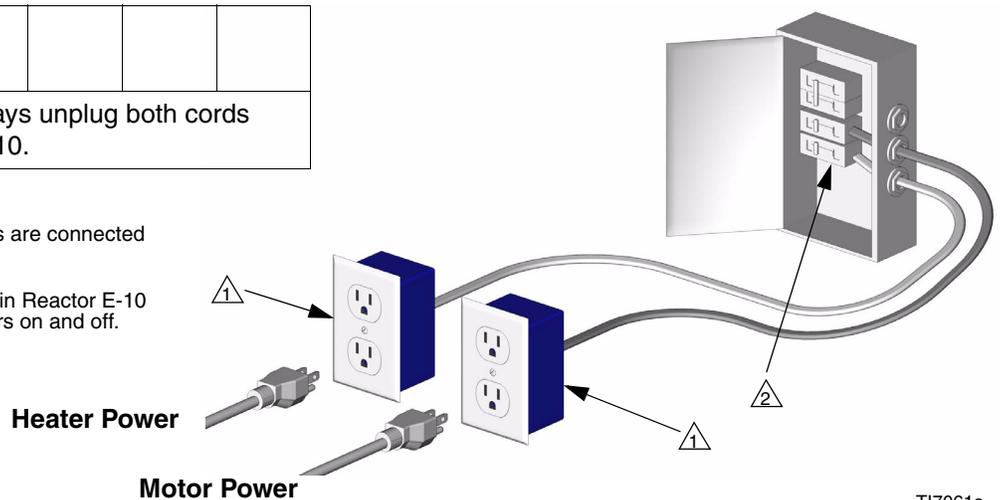

T17061a

**FIG. 5. Use Two Separate Circuits for Two Cord Models**

## 4. Connect fluid hoses

Connect fluid supply hoses to outlet hose connections (R, FIG. 6). Red hoses for component A (ISO), blue for component B (RES). Fittings are sized to prevent connection errors. Connect other end of hoses to A and B inputs of gun.

*Heated units only:* connect recirculation hoses from gun recirculation ports to connections (S).

## 5. Connect gun air hose

Connect gun air hose to the gun air input and to the air filter outlet (Z). If you are using more than one hose bundle, join the air hoses with the nipple (305) provided with the hose bundle.

On heated units with Fusion guns, connect the supplied ball valve and quick-disconnect coupler to the gun air hose, then connect the coupler to the gun air fitting.

## 6. Connect main air supply

Connect the main air supply to the quick disconnect fitting (Q) on the unit. Air supply hose must be at least 5/16 in. (8 mm) ID up to 50 ft (15 m) or 3/8 in. (10 mm) ID up to 100 ft (30 m).

 Air Filter/Moisture Separator (Z) is equipped with an automatic moisture drain.

## 7. Flush before first use

The Reactor E-10 is tested with a plasticizer oil at the factory. Flush out the oil with a compatible solvent before spraying. See page 24.

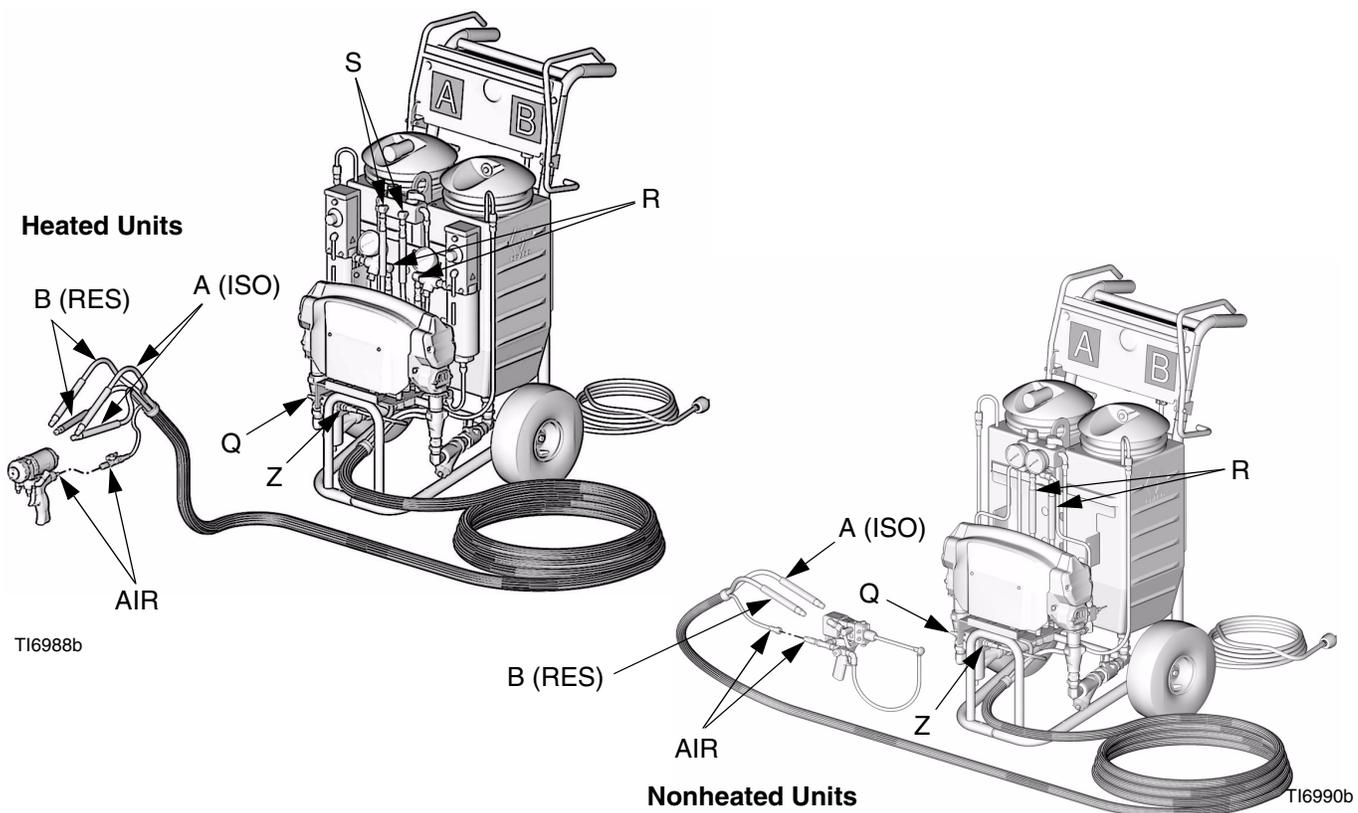


FIG. 6. Hose Connections


## 8. Fill wet-cups

Keep the felt washers in the pump wet-cups saturated with Graco ISO pump oil, Part No. 217374. The lubricant creates a barrier between the ISO and the atmosphere.

--	--	--	--	--	--	--

Pump rod and connecting rod move during operation. Moving parts can cause serious injury such as pinching or amputation. Keep hands and fingers away from wet-cup during operation. Shut off Motor Power before filling wet-cup.

Fill wet-cups through slots in plate, or loosen screws and swing plate aside.

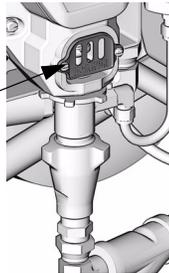

T16985a

## 9. Fill fluid tanks

--	--	--	--	--	--	--

### CAUTION


To prevent cross-contamination of fluids and equipment parts, **never** interchange component A (isocyanate) and component B (resin) parts or containers.

Have at least two 5 gal. (19 liter) pails to transfer fluid from drums to supply tanks. Label one pail "A" and the other "B", using the red and blue labels provided. Always doublecheck which material you have before pouring it in the supply tanks. Pouring is easier if pails are not filled to the top.

Open only one supply tank at a time, to avoid splashing material from one tank into the other when filling.

Using a drill and mixing blade, mix filled or separated materials in the pail before adding to the tanks. Material left in the tanks overnight may need to be remixed in the tanks.


- a. Lift hose rack. Remove tank A cover and pour ISO into tank A (red side, with desiccant filter in cover). Replace cover

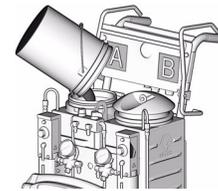

T17017a

Desiccant filter is blue when fresh, and turns pink when saturated. Be sure shipping plugs are removed from openings on desiccant filter.

- b. Remove tank B cover and pour resin into tank B (blue side). Replace cover

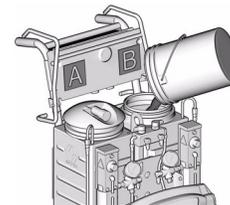


T17018a

. Add thin coating of grease lubricant to tank o-ring if lid is difficult to assemble to tank.

# 10. Purge air and flush fluid from lines



- a.** Remove both recirculation tubes (P) from the tanks and secure each one in a dedicated waste container.

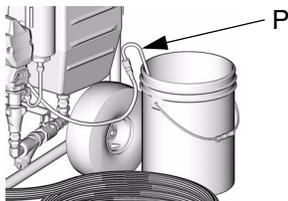


TI7022a

- b.** Set function knob to Stop/Park .




- c.** Plug in power cord(s). See TABLE 2, page 13.

- d.** Open both pump fluid inlet valves (V, shown in open position).

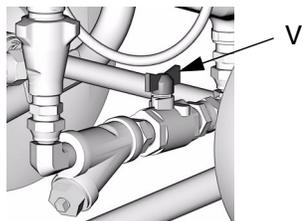


TI7019a

- e.** Turn on Motor Power.

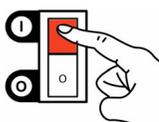

- f.** Set Recirc/Spray valves to Recirc.



- g.** Set function knob to Slow Recirc  or Fast Recirc .



- h.** When clean fluids exit both recirculation tubes (P), set function knob to Stop/Park .



- i.** Replace recirculation tubes in supply tanks.

- j.** On nonheated units, purge the hoses through the gun without a static mixer installed.

 For heated units, continue with **Startup of Heated Units**, page 17.

Nonheated units are ready to spray/dispense. Go to **Spraying/Dispensing**, page 20.


# Startup of Heated Units

<p>Some models heat the fluid, which can cause equipment surfaces to become very hot. To avoid severe burns:</p> <ul style="list-style-type: none"> <li>Do not operate Reactor E-10 without all covers and shrouds in place.</li> <li>Do not touch hot fluid or equipment.</li> <li>Allow equipment to cool completely before touching it.</li> <li>Wear gloves if fluid temperature exceeds 110°F (43°C).</li> </ul>						

**1.** Perform **Setup**, pages 12-16.

**2.** Set function knob to Slow Recirc or Fast


Recirc See **Heatup Guidelines**, page 18, then continue with steps 3-6.

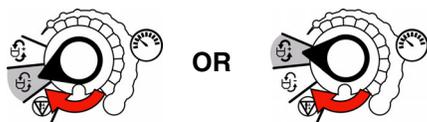

**3.** Turn on Heater Power.



**4.** Temporarily set heater control knobs to maximum setting.

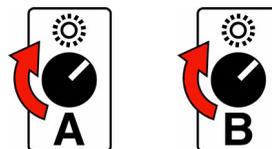

**5.** Circulate through heaters until temperature readouts display desired temperature. See TABLE 4 below.

**6.** Adjust heater control knobs as necessary for a stable spray temperature.

**Table 4: Heatup Time Guidelines for starting a cold machine with 5 gal. (19 l) per side (see Notes below)**

Fluid Spray Target Temperature	35 ft (10.7 m) Hose (1 bundle)	70 ft (21 m) Hose (2 bundles)
125°F (52°C)	20 minutes	25 minutes
150°F (65°C)	40 minutes	50 minutes

Use fast circulation until temperature is within 20°F (11°C) of target, then use slow circulation to reach final temperature.

Different fluids will absorb heat at different rates.

When refilling a warm machine, heatup times will be less.

## Heatup Guidelines

 The fluids must be circulated from the pumps through the heaters, hoses, and back to the tanks to ensure warm fluids are supplied to the gun.

### Slow Recirculation

- Slow Recirc results in a higher temperature transfer in the heater, so hoses and gun heat up quicker.
- Good for touchup or low flow spraying, up to moderate temperature.
- Not used to circulate full tanks up to temperature.
- Use with 245 fa blowing agent foams, to minimize heat returned to tank and reduce frothing.

### Fast Recirculation

- Fast Recirc keeps heaters on fulltime to bring fluid tanks up to temperature. The higher your usage rate, the more heat needed in the tanks before spraying.
  - *For normal usage rates:* Use Fast Recirc to get tanks to approximately 50°F (28°C) below desired spray temperature, then use Slow Recirc to raise hose and gun to desired temperature.
  - *For higher flow rates or continuous spraying:* Use Fast Recirc to bring temperature of tanks to approximately 20°F (11°C) below desired spray temperature, then use Slow Recirc to raise hose and gun to desired temperature.
  - *Volume in tanks:* Use only what you need. For example, 2.5 gal. (10 l) in each tank will heat up almost twice as fast as 5 gal. (20 l).
- Mixes fluid within tanks, to avoid heating only the fluid at the top of the tank.
- Use for flushing.

## Heat Management Tips

- Heaters perform better with lower flow rates or smaller mix modules.
- Triggering the gun for short periods helps maintain efficient heat transfer, keeping material at the desired temperature. Triggering the gun for a long period does not allow enough heating time, and cold material will enter the hose.
- If temperature displays fall below acceptable limits, set function knob to Slow Recirc  and circulate again to bring temperatures back up.
- Each 35 ft (10.7 m) hose bundle adds about 5 minutes to heatup time, with most materials. Water-based materials take longer to heat up. Maximum recommended hose length is 105 ft (32 m).
- Use Fast Recirc  until tanks are warm to the touch, then use Slow Recirc  until displays read desired temperature.
- For a quicker start, do initial heatup circulation with the tanks 1/4 to 1/3 filled, then add more material.

## Heating Foam Resins with 245 fa Blowing Agents

New foam blowing agents will froth at temperatures above 90°F (33°C) when not under pressure, especially if agitated.

**Never** fill the 7 gal. (26 l) supply tanks beyond the 5 gal. (19 l) line on the tanks, to leave room for some frothing.

### At High Ambient Temperature (above 75°F/24°C)

- Pour resins slowly to avoid frothing.
- Only use Slow Recirc , to avoid heating and agitating the tank. If temperature doesn't keep up, set function knob to Stop/Park , then set to Slow Recirc  again.
- When you stop to refill the tanks, avoid boiling off fluid in the heaters by following these steps:


- a. Shut off Heater Power.



- b. Leave hoses under pressure.

- c. Fill tanks, page 15.

- d. Set Recirc/Spray valves to Recirc.



- e. Set function knob to Slow Recirc .

- f. Turn on Heater Power.




### At Cool Ambient Temperature (below 75°F/24°C)

- Use Fast Recirc  to heat tanks to 75-90°F. (24-32°C), then use Slow Recirc  to raise hose and gun to desired spray temperature.
- If the top of the resin in tank starts frothing, do not use Fast Recirc  any more.

# Spraying/Dispensing



Air is supplied to spray gun with gun piston safety lock or trigger safety lock engaged and gun fluid manifold valves A and B closed (if present).

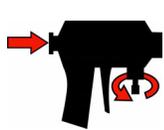

Fusion Gun



2K Ultra-Lite Gun

T17069a

1. Set function knob to Stop/Park .




2. Set Recirc/Spray valves to Spray.



3. Turn function knob to Pressure Adjust . Keep turning to the right until fluid pressure gauges show desired pressure.



4. Check fluid pressure gauges to ensure proper pressure balance. If imbalanced, reduce pressure of higher component by **slightly** turning Recirc/Spray valve for that component toward Recirc, until gauges show balanced pressures. The pressure imbalance alarm (Status Code 1) is inactive for 10 sec after entering spray pressure mode, to allow time to balance pressures.

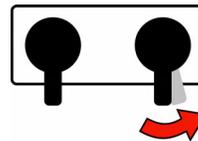

In this example, B side pressure is higher, so use the B side valve to balance pressures.


Watch gauges for 10 sec to be sure pressure holds on both sides and pumps are not moving.

5. Open gun fluid manifold valves A and B (impingement mix guns only).



On impingement guns, **never** open fluid manifold valves or trigger gun if pressures are imbalanced.

- Disengage piston safety lock or trigger safety lock.




Fusion Gun



2K Ultra-Lite Gun

T17070a


- Test spray onto cardboard or plastic sheet. Verify that material fully cures in the required length of time, and is the correct color. Adjust pressure and temperature to get desired results. Equipment is ready to spray.



## Pause (Heated Units)

 To bring the hose and gun back to spray temperature after a brief break, use the following procedure.

- Engage piston safety lock or trigger safety lock.




Fusion Gun




2K Ultra-Lite Gun

T17069a

- Set function knob to Slow Recirc .



- Set Recirc/Spray valves to Recirc until temperature readouts come back up.



- If you stop spraying for more than 2 minutes when using an impingement mix gun, close gun fluid valves A and B. Doing this will keep the internal parts of the gun cleaner and prevent crossover.



## Refilling Tanks

Material can be added to the tanks at any time. See page 15.

 If you are operating at high temperatures or flow rates, follow instructions under **Pause (Heated Units)** to bring tanks up to temperature.

### CAUTION

To prevent cross-contamination of fluids and equipment parts, **never** interchange component A (isocyanate) and component B (resin) parts or containers.

Have at least two 5 gal. (19 liter) pails to transfer fluid from drums to supply tanks. Label one pail "A" and the other "B", using the red and blue labels provided. Always doublecheck which material you have before pouring it in the supply tanks. Pouring is easier if pails are not filled to the top.

Open only one supply tank at a time, to avoid splashing material from one tank into the other when filling.


# Pressure Relief Procedure



1. Engage piston safety lock or trigger safety lock.



Fusion Gun

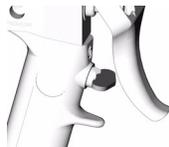


2K Ultra-Lite Gun

T17069a

2. Set function knob to Stop/Park .



3. Turn Recirc/Spray valves to Recirc. Fluid will be dumped to supply tanks. Pumps will move to the bottom of their stroke. Ensure gauges drop to 0.



# Shutdown

 For longer breaks (more than 10 minutes), use the following procedure. If you will be shut down for more than 3 days, first see **Flushing**, page 24.

1. Follow all steps of **Pressure Relief Procedure**, at left.

2. *If using an impingement mix gun, close gun fluid valves A and B. Doing this will keep the internal parts of the gun cleaner and prevent crossover.*



3. Shut off Heater Power (heated units only).




4. Shut off Motor Power.



5. Refer to your separate gun manual and perform the **Shutdown** procedure.

# Maintenance

- Check pump wet-cups fluid level daily, page 15.
- Do not overtighten packing nut/wet-cup. Throat u-cup is not adjustable.
- Keep component A from exposure to moisture in atmosphere, to prevent crystallization.
- Wipe supply tank lid o-ring and inner rim daily to prevent ISO crystallization. Keep film of grease on o-ring and inside of lid.
- Check desiccant filter weekly. Filter is blue when fresh, and turns pink when saturated.
- Remove plug (X) and clean fluid inlet strainer (51a) as needed. Always clean the fluid inlet strainers after flushing.
- *If using an impingement mix gun, close gun fluid valves A and B when not spraying. Doing this will keep the internal parts of the gun cleaner and prevent crossover. Clean gun mix chamber ports and check valve screens regularly. See gun manual.*

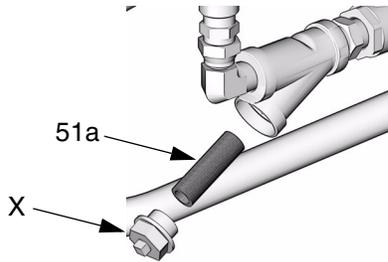

T17021a


# Flushing



Flush equipment only in a well-ventilated area. Do not spray flammable fluids. Do not turn on heaters while flushing with flammable solvents.

- Generally, flush if you will be shut down for more than 3 days. Flush more often if material is moisture sensitive and humidity is high in the storage area, or if material may separate or settle out over time.
- Flush out old fluid with new fluid, or flush out old fluid with a compatible solvent before introducing new fluid.
- Use the lowest possible pressure when flushing.
- Always leave some type of fluid in system. Do not use water.
- For long term storage, flush out the solvent with a storage fluid such as Bayer Mesamoll plasticizer or, at minimum, clean motor oil.

1. Engage piston safety lock or trigger safety lock. Close fluid valves A and B. Leave air on.



Fusion Gun




2K Ultra-Lite Gun

T17069a


2. Set function knob to Stop/Park 



3. Shut off Heater Power (heated units only). Allow system to cool.

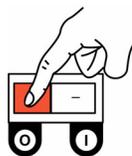


4. Remove recirculation tubes (31) from supply tanks and place in original containers or waste containers.

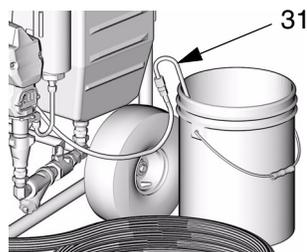

T17022a

5. Turn Recirc/Spray valves to Recirc.



6. Set function knob to Fast Recirc . Pump material from supply tanks until no more comes out.



7. Set function knob to Stop/Park 



- 8.** Wipe out any remaining material from the supply tanks. Fill each supply tank with 1-2 gal. (3.8-7.6 l) of solvent recommended by your material manufacturer.


- 9.** Set function knob to Fast Recirc . Pump solvent through system to waste containers.



- 10.** When nearly clear solvent comes from recirculation tubes, set function knob to Stop/Park . Return recirculation tubes to supply tanks.



- 11.** Set function knob to Fast Recirc . Circulate solvent through system for 10-20 minutes to ensure thorough cleaning.



 To flush gun, refer to gun instruction manual.

**Purge Gun Hoses (Nonheated Units Only)**

 Disconnect hoses from gun and secure back into the tanks for thorough cleaning with solvent.

- Turn Recirc/Spray valve A to Spray.



- Open gun into waste container A.
- Set function knob to Slow Recirc  until hose is flushed.
- Set function knob to Stop/Park .
- Repeat for B side.

- 12.** Set function knob to Stop/Park .



- 13.** Solvent flushing is a two step process. Go back to step 4, drain solvent, and flush again with fresh solvent.


- 14.** Leave unit filled with solvent, plasticizer, clean motor oil, or refill supply tanks with new material and reprime.

 Never leave the unit dry unless it has been disassembled and cleaned. If fluid residue dries in the pumps, the ball checks may stick the next time you use the unit.

# Troubleshooting

## Status Codes

Determine the status code by counting the number of times the status indicator (ST) blinks.

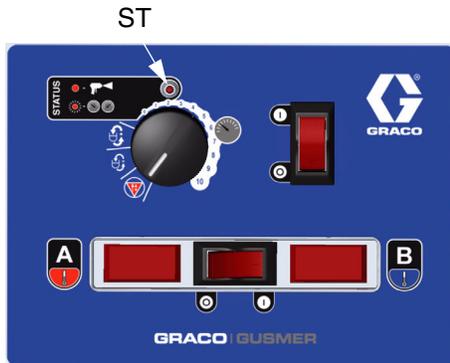

TI7016a


### Status Code 1: Pressure Imbalance

The unit does not check for pressure imbalance at setpoints less than 250 psi (1.75 MPa, 17.5 bar).

The unit does not check for pressure imbalance for 10 sec after entering pressure mode.

Unit senses pressure imbalance between components A and B, and warns or shuts down, depending on settings of DIP switches 1 and 2. To turn off automatic shutdown and/or tighten pressure tolerances for status code 1, see **Status Code 1 and 2 Settings**, below.

1. Check fluid supply of lower pressure component and refill if necessary.
2. Reduce pressure of higher component by **slightly** turning Recirc/Spray valve for that component toward Recirc, until gauges show balanced pressures.

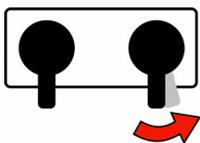

In this example, B side pressure is higher, so use the B side valve to balance pressures.

Turn Recirc/Spray valve only enough to balance pressure. If turned completely, all pressure will bleed off.

3. Check fluid inlet strainers (51a, page 23) and fluid filters at gun.
4. Clean or change restrictor at mixer manifold if using disposable mixer gun kit.

### Status Code 2: Pressure Deviation from Setpoint

The unit does not check for pressure deviation at setpoint less than 400 psi (2.8 MPa, 28 bar).

Unit senses pressure deviation from setpoint, and warns or shuts down, depending on settings of DIP switches 3 and 4. If equipment cannot maintain enough pressure for a good mix with an impingement mix gun, try using a smaller mix chamber or nozzle.

To turn off automatic shutdown and/or tighten pressure tolerances for status code 2, see **Status Code 1 and 2 Settings**, below.

### Status Code 1 and 2 Settings

1. Locate switch SW2 on the control board, page 37.
2. Set the four DIP switches to the desired positions. See FIG. 7 and TABLE 5 on page 27.



FIG. 7. DIP Switch (SW2) Settings

**Table 5: Status Code 1 and 2 Settings**

DIP Switch and Function	Left	Right (default setting)
<b>DIP Switch 1</b> Enables shutdown due to A and B pressure imbalance	OFF	ON
<b>DIP Switch 2</b> Causes <i>shutdown</i> if A and B pressure imbalance is greater than  Causes <i>warning</i> if A and B pressure imbalance is greater than	500 psi (3.5 MPa, 35 bar) (60% if < 800 psi [5.6 MPa, 56 bar] running)	800 psi (5.6 MPa, 56 bar) (70% if < 800 psi [5.6 MPa, 56 bar] running)
	300 psi (2.1 MPa, 21 bar) (50% if < 800 psi [5.6 MPa, 56 bar] running)	500 psi (3.5 MPa, 35 bar) (60% if < 800 psi [5.6 MPa, 56 bar] running)
<b>DIP Switch 3</b> Enables shutdown due to deviation of pressure from setpoint	OFF	ON
<b>DIP Switch 4</b> Causes warning if deviation of pressure from setpoint is greater than	300 psi (2.1 MPa, 21 bar) (25% if < 800 psi [5.6 MPa, 56 bar])	500 psi (3.5 MPa, 35 bar) (40% if < 800 psi [5.6 MPa, 56 bar])

### Status Code 3: Transducer A Failure

1. Check transducer A electrical connection (J3) at board, page 37.
2. Reverse A and B transducer electrical connections at board, page 37. If error moves to transducer B (Status Code 4), replace transducer A, page 38.

### Status Code 4: Transducer B Failure

1. Check transducer B electrical connection (J8) at board, page 37.
2. Reverse A and B transducer electrical connections at board, page 37. If error moves to transducer A (Status Code 3), replace transducer B, page 38.

### Status Code 5: Excessive Current Draw

Shut off unit and contact distributor before resuming operation.

1. Locked rotor; motor unable to turn. Replace motor, page 40.
2. Short on control board. Replace board, page 36.
3. Worn or hung up motor brush causing arcing of brush at commutator. Replace brushes, page 41.

### Status Code 6: High Motor Temperature

Motor is running too hot.

1. Motor temperature too high. Reduce pressure duty cycle, gun tip size, or move Reactor E-10 to a cooler location. Allow 1 hour for cooling.
2. Check fan operation. Clean fan and motor housing.

### Status Code 7: No Cycle Counter Switch Input

Have not received input from cycle counter switch for 10 seconds after selecting Recirc mode.

1. Check cycle counter switch connection to board (J10, pins 5, 6), page 37.
2. Check that magnet (224) and cycle counter switch (223) are in place under B side motor end cover (227). Replace if necessary.

## Troubleshooting Chart

PROBLEM	CAUSE	SOLUTION
Reactor E-10 does not operate.	No power.	Plug in power cord.
		Cycle Motor Power off  , then on  to reset breaker.
Motor does not operate.	Power turned on with function knob set to a run position.	Set function knob to Stop/Park  , then select desired function.
	Loose connection on control board.	Check connection at J4 (120 V) or J11 (240 V). See page 36.
	Worn brushes.	Check both sides. Replace brushes worn to less than 1/2 in. (13 mm), see page 41.
	Broken or misaligned brush springs.	Realign or replace, page 41.
	Brushes or springs binding in brush holder.	Clean brush holder and align brush leads for free movement.
	Shorted armature.	Replace motor, page 40.
	Check motor commutator for burn spots, black pitting, or other damage.	Remove motor. Have motor shop resurface commutator, or replace motor, page 40.
	Failed control board.	Replace board. See page 36.
Fan not working.	Loose fan cable.	Check that cable is connected at fan and at J9 on control board. See pages 41 and 36.
	Defective fan.	Test and replace if necessary, page 41.
Pump output low.	Plugged fluid inlet strainer.	Clear, see page 23.
	Plugged disposable mixer.	Clean or replace.
	Leaking or plugged piston valve or intake valve in displacement pump.	Check valves. See pump manual.
One side doesn't come up to pressure in spray mode.	Dirty or damaged Recirc/Spray valve.	Clean or repair, page 32.
	Plugged fluid inlet strainer.	Clear, see page 23.
	Pump intake valve plugged or stuck open.	Clean pump intake valve. See page 33.
Pressure is higher on one side when setting pressure with function knob.	Pump intake valve partially plugged.	Clean pump intake valve. See page 33.
	Air in hose. Fluid is compressible.	Purge air from hose.
	Unequal size hoses or unequal hose construction.	Use matching hoses, or balance pressures before spraying.

PROBLEM	CAUSE	SOLUTION
Pressures are not balanced when running, but pressure is generated and holds on both strokes.	Unequal viscosities.	Change temperature setting to balance viscosities. Change restrictor at mix point to balance back pressure.
	Restriction on one side.	Clean mix module or restrictor at mix manifold.
		Clean gun check valve screens.
Fluid leak in pump packing nut area.	Worn throat seals.	Replace. See pump manual.
Pressure doesn't hold when stalled against gun in spray mode.	Leaking Recirc/Spray valve.	Repair, page 32.
	Leaking piston valve or intake valve in displacement pump.	Repair. See pump manual.
	Leaking gun shutoff.	Repair. See gun manual.
Pressure is higher on B side during startup of recirculation, especially in High Recirc mode.	This is normal. Component B is typically higher viscosity than component A until the material is heated during recirculation.	No action required.
Resin froths and overflows tank after refilling hot equipment.	Agitation from pouring. Hot material in heaters and hoses froths when not under pressure.	Turn heaters off before refilling. Leave hoses pressurized. See page 19.
One gauge shows half as many pulses as the other when pumps are cycling.	Loss of pressure on downstoke.	Intake valve is leaking or not closing. Clean or replace valve; see page 33.
	Loss of pressure on upstoke.	Piston valve is leaking or not closing. Clean or replace valve or packings; see page 33.
Status indicator (red LED) not lit.	Motor Power switch off.	Cycle Motor Power off  , then on  to reset breaker.
	Loose indicator cable.	Check that cable is connected at J10 pins 1 (red) and 2 (black) on control board. See page 36.
	Failed control board.	Replace board. See page 36.
A side rich; lack of B side.	A side gauge is low.	B side restriction downstream of gauge. Check gun check valve screen, mix module, or mix manifold restrictor.
	B side gauge is low.	B side material supply problem. Check B side inlet strainer and pump intake valve.
B side rich; lack of A side.	A side gauge is low.	A side material supply problem. Check A side inlet strainer and pump intake valve.
	B side gauge is low.	A side restriction downstream of gauge. Check gun check valve screen, mix module, or mix manifold restrictor.

PROBLEM	CAUSE	SOLUTION
No temperature display (heated units only).	Loose display cables on control board.	Check cable connections to each display, page 36.
	Failed control board (displays get power from control board).	Remove access panel. Check if board LED is lighted. If not, replace board, page 36.
	Inadequate power to control board.	Check that power supply meets requirements.
	Loose power cable.	Check cable connections, page 36.
	Motor Power switch circuit breaker tripped.	Display is powered from Motor Power circuit breaker. Cycle Motor Power off  , then on  to reset breaker.
Wrong temperature displayed.	°F/°C switch in wrong position.	Set switch, see page 34.
Temperature displays do not match at ambient temperature.	Displays need calibration.	Turn calibration screw on back of displays to correct reading, see page 34.
No heat, and heater indicator light is off.	Heater Power shut off, or circuit breaker tripped.	Cycle Heater Power off  , then on  to reset circuit breaker.
	Bad thermostat.	With power on, check for continuity at clicks of heater control knob. To replace thermostat, see 311210.
	Bad overtemperature sensor (this is a high temperature limit fuse and must be replaced if blown).	With power on, check for continuity at overtemperature sensor. To replace sensor, see 311210.
	Loose heater cable connections.	Check connections at Heater Power switch. See FIG. 12, page 37.
No heat, but heater indicator light is on.	Bad heater cartridge.	Check for continuity at heater cartridge connections: 16-18.6 ohms for 120 V, 64-75 ohms for 240 V.
Heater on one side shuts off early or continuously during recirculation.	Y-strainer is plugged on that side.	Clean or replace strainer, page 23.
	Fluid inlet valve (52) closed.	Open valve.

# Repair

## Before Beginning Repair

							
<p>Repairing this equipment requires access to parts which may cause electric shock or other serious injury if work is not performed properly. Have a qualified electrician connect power and ground to main power switch terminals, see page 12. Be sure to shut off all power to the equipment before repairing.</p>							

1. Flush if possible, see page 24. If not possible, clean all parts with solvent immediately after removal, to prevent isocyanate from crystallizing due to moisture in the atmosphere.

2. Set function knob to Stop/Park .



3. Shut off Motor Power. Disconnect power supply.



4. Shut off Heater Power. Allow equipment to cool before repairing.



5. Relieve pressure, page 22.

## Removing Supply Tanks




Displacement pump repair and parts information is included in manual 311076, which is supplied with your unit.

1. See **Before Beginning Repair**, page 31. Relieve pressure, page 22.

							
---	--	---	--	--	--	--	--

2. Close both fluid inlet ball valves (52).

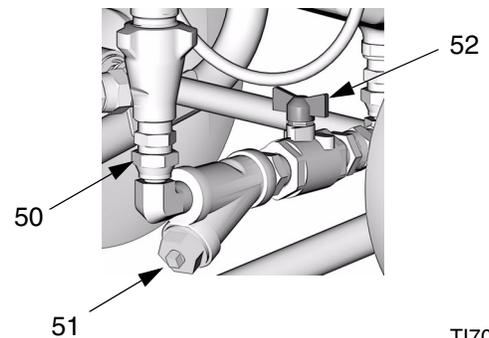

T17020a

 Use dropcloth or rags to protect Reactor E-10 and surrounding area from spills.

3. Open filter drain plug on Y-strainer (51).
4. Disconnect swivel elbow (50) at pump fluid inlet.
5. Remove screws (4) holding tank to cart frame.
6. Pivot top of tank to side and lift it and fluid inlet fittings off cart.

# Recirc/Spray Valves




1. See **Before Beginning Repair**, page 31. Relieve pressure, page 22.

2. See FIG. 8. Disassemble Recirc/Spray valves. Clean and inspect all parts for damage. Ensure that the seat (503a) and gasket (503b) are positioned inside each valve cartridge (503).

3. Apply PTFE pipe sealant to all tapered pipe threads before reassembling.


4. Reassemble in reverse order, following all notes in FIG. 8.

## Heated Models

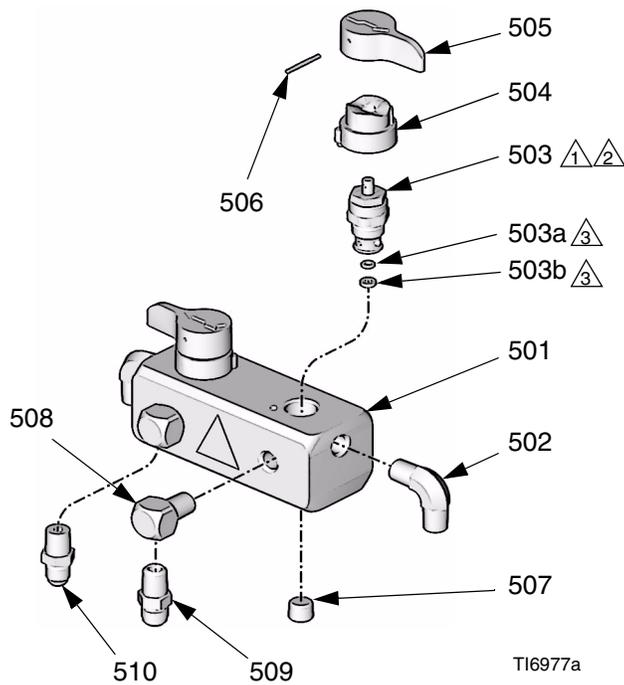

T16977a

## Nonheated Models

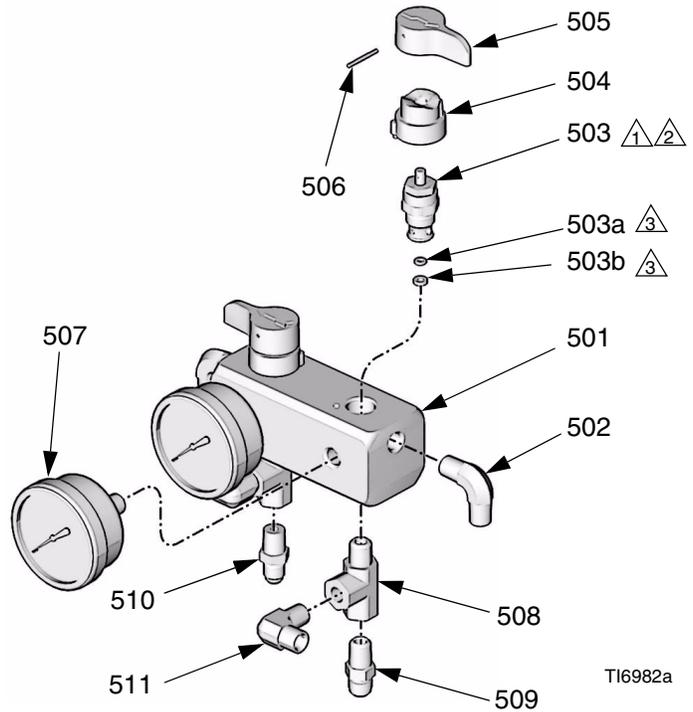

T16982a

- △1 Torque to 250 in-lb (28 N•m).
- △2 Use blue threadlocker on valve cartridge threads into manifold.
- △3 Part of item 503.

**FIG. 8. Recirc/Spray Valves**

# Displacement Pump




Displacement pump repair and parts information is included in manual 311076, which is supplied with your unit.



Use dropcloth or rags to protect Reactor E-10 and surrounding area from spills.



1. See **Before Beginning Repair**, page 31. Relieve pressure, page 22.
2. Close both fluid inlet ball valves (52). Open filter drain plug on Y-strainer (51).

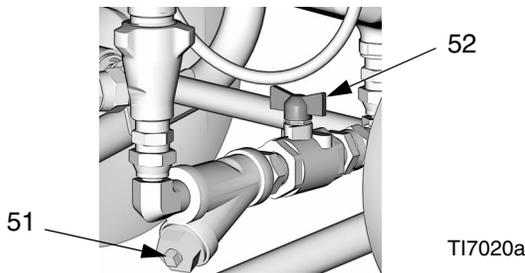

## To Remove Intake Valve Only



If pump is not generating any pressure, the intake ball check may be stuck closed with dried material.


If the pump is not generating pressure on the downstroke, intake ball check may be stuck open.

Either of these conditions can be serviced with the pump in place.

3. Disconnect fluid inlet (C) and swing it aside.
4. Remove intake valve by hitting ears (E) firmly right-to-left with a non-sparking hammer. Unscrew from pump. See manual 311076 for repair and parts.

## To Remove Entire Pump Assembly

5. Disconnect fluid inlet (C) and outlet (D) lines. Also disconnect steel outlet tube (16) from heater inlet.
6. Remove pump rod cover (222). Push clip up in back and push pin (217) out. Loosen locknut (218) by hitting firmly right-to-left with a non-sparking hammer. Unscrew pump. See manual 311076 for pump repair and parts.
7. Install pump in reverse order of disassembly, following all notes in FIG. 9. Clean strainer (51). Reconnect fluid inlet (C) and outlet (D) lines.
8. Tighten fluid outlet fitting (D), then tighten locknut (218) by hitting firmly with a non-sparking hammer.
9. Open fluid inlet valve (52). Set function knob to Slow Recirc . Purge air and prime. See page 16.

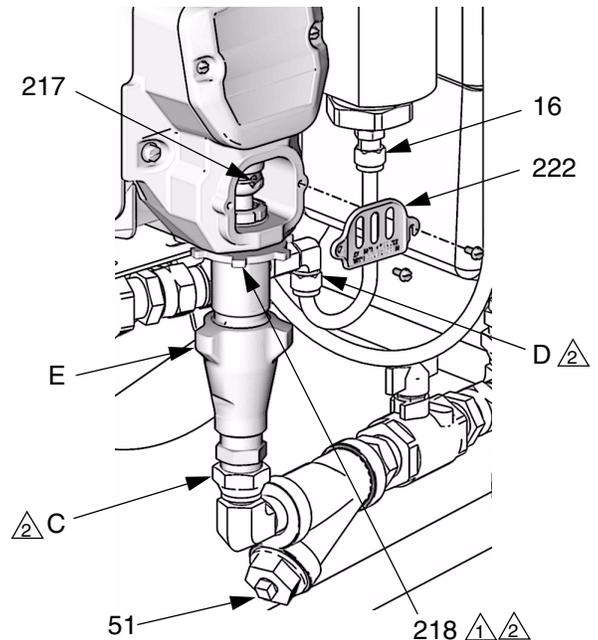

 Flat side faces up. Tighten by hitting firmly with non-sparking hammer.

 Lubricate threads with ISO oil or grease.

TI7025a

**FIG. 9. Displacement Pump**

## Control Module

### Change Display Temperature Units (°F/°C)

Unit is shipped with temperature displays set to °F.



1. Shut off Motor Power. Disconnect power supply.



2. Remove access cover (39) from back of control module.
3. See FIG. 11. Locate slide switch (FC) at right edge of each temperature display board. Unit is shipped set to °F (down). To change to °C, move both switches to up position.

### Calibrate Temperature Displays



1. Remove access cover (39) from back of control module.
2. See FIG. 11. Locate calibration screw (CS) at upper right corner of each temperature display board. Turn screw slightly to correct temperature display.

 Temperature displays do not read lower than 50°F (10°C).

### Replace Temperature Display and Sensor (Heated Units Only)



1. See **Before Beginning Repair**, page 31. Relieve pressure, page 22.
2. Remove temperature sensor (424):

- a. Loosen setscrew (22) on thermowell housing (21). See FIG. 10.
  - b. Pull sensor (424) out of thermowell housing.
  - c. Work sensor and wire out of cable channel between tanks. It may be easier to remove one tank. See page 31.
3. Remove access cover (39) from back of control module.
  4. Disconnect temperature display power cable from J14 or J15 at bottom left of control board (406).
  5. Remove four screws from rear panel studs and remove temperature display (403) from front plate (401).
  6. Remove screw and nut (409) holding display to plate (403).
  7. Pull sensor cable through split in bushing (411).
  8. Reassemble in reverse order. Mount temperature display so Heater Power switch off (0) position is at left when facing control panel.

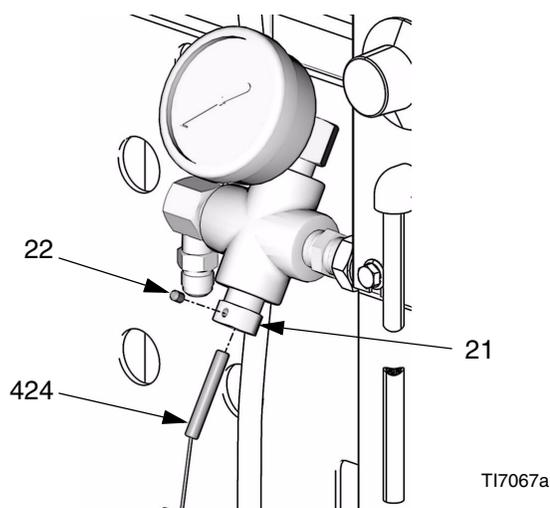


FIG. 10. Temperature Sensor

TI7067a


## Replace Function Knob/Potentiometer



1. See **Before Beginning Repair**, page 31. Relieve pressure, page 22.
2. Remove access cover (39) from back of control module.
3. Disconnect potentiometer wires from J2 on control board (406). See FIG. 12.

4. See FIG. 11. Remove two setscrews (416a) and pull function knob (416) off potentiometer (404) shaft.
5. Remove nut (N, part of 404) and detent plate (415).
6. Install new potentiometer (404) in reverse order. Position potentiometer so slot (S) is horizontal. Position knob (416) so pointer (P) faces up. Install knob on shaft so slot (S) engages alignment pin in knob. Push knob onto shaft against detent spring before tightening setscrews (416a).
7. Reconnect potentiometer wires to J2 as shown in FIG. 12.

### Detail of Function Knob/Potentiometer

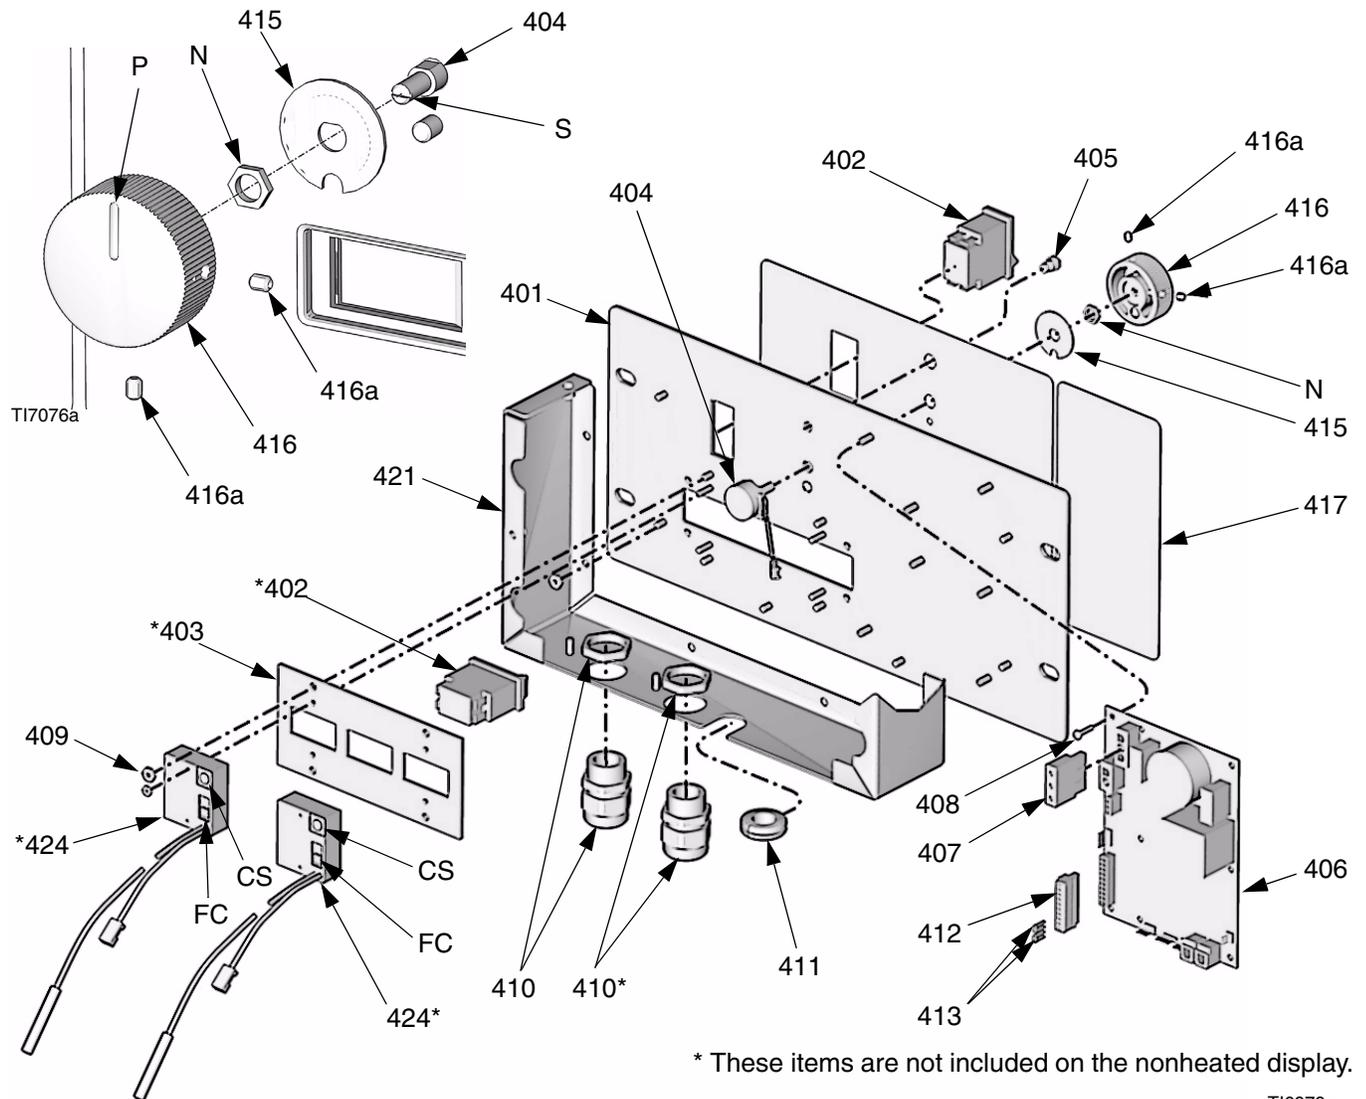

\* These items are not included on the nonheated display.

T16979a

FIG. 11. Control Module (Heated Model Shown)

## Control Board

### Power Bootup Check



There is one red LED (D11) on the board. Power must be on to check. See FIG. 12 for location.  
Function is:

- Startup: 1 blink for 60 Hz, 2 blinks for 50 Hz.
- Motor running: LED on.
- Motor not running: LED off.
- Status code (motor not running): LED blinks status code.



### Control Board Replacement

1. See **Before Beginning Repair**, page 31. Relieve pressure, page 22.
2. Remove access cover (39) at back of control module to expose control board (406).
3. Disconnect all cables and connectors from board. Remove two jumper wires (413) from J10 pins 7-8 and 9-10.
4. Remove screws (408) and remove board from control module.
5. Install new board in reverse order.



Apply thermal compound between the square steel piece on the back of the board and the main aluminum plate. Order Part No. 110009 Thermal Compound.

**Table 6: Control Board Connectors (see FIG. 12)**

Board Jack	Pin	Description
J1	n/a	Main power from breaker
J2	n/a	Function knob
J3	n/a	Transducer A
J4	n/a	Motor power (230 V units)
J7	1, 2	Motor thermal overload signal
J8	n/a	Transducer B
J9	n/a	Fan
J10	1, 2	Status indicator
	3, 4	Not used
	5, 6	Cycle switch signal
	7-8	Jumpered
	9-10	Jumpered
J11	n/a	Motor power (120 V)
J14	n/a	B temperature display
J15	n/a	A temperature display

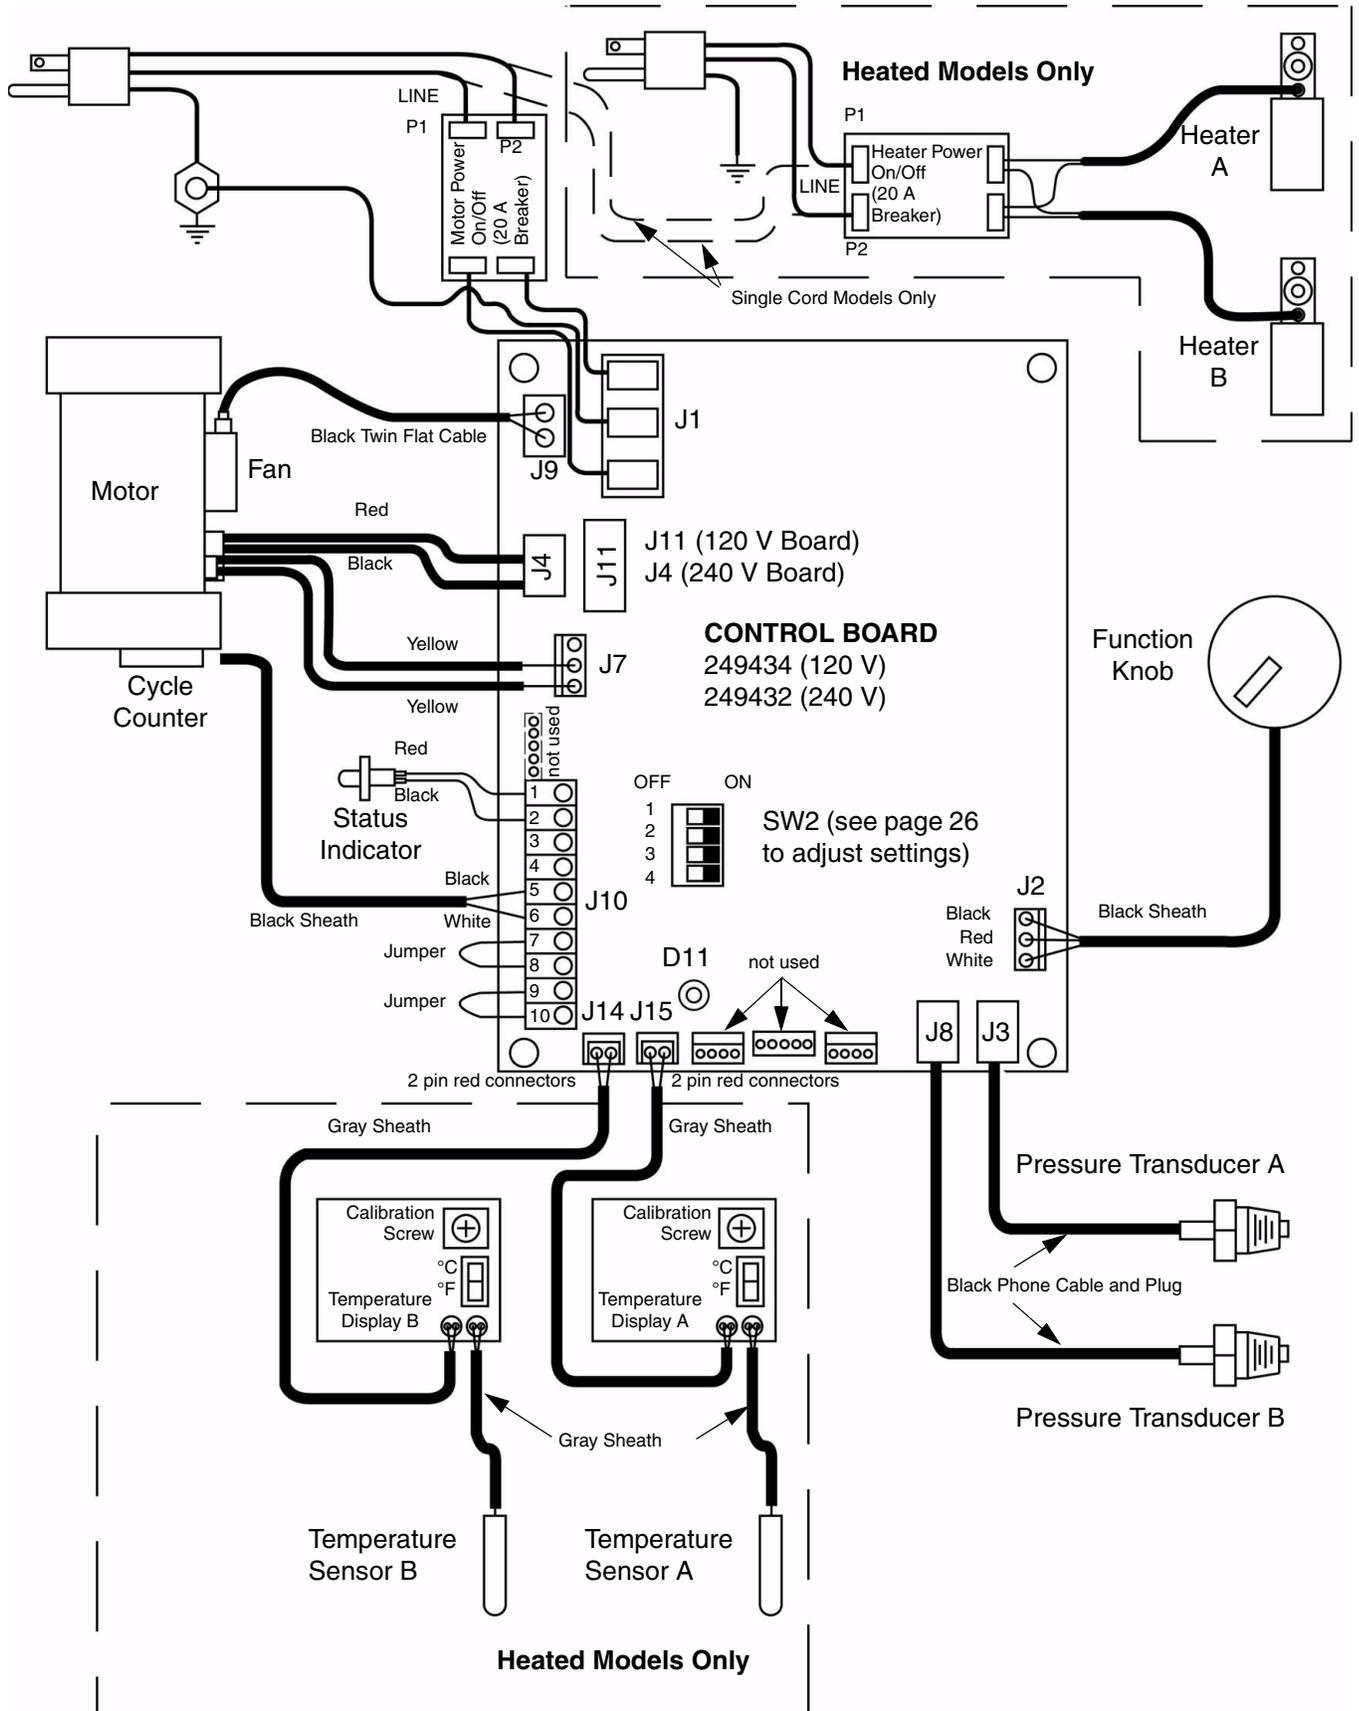


FIG. 12. Control Module Wiring Connections

## Fluid Heaters (if supplied)



Fluid heater repair and parts information is included in manual 311210, which is supplied with heated units.



To replace a pressure transducer, see at right.



1. See **Before Beginning Repair**, page 31. Relieve pressure, page 22.



2. Control section of heater can be repaired in place. Remove heater to clean fluid section. See manual 311210 for heater repair and parts.

## Pressure Transducers



1. See **Before Beginning Repair**, page 31. Relieve pressure, page 22.
2. Remove access cover (39) at back of control module to expose control board (406).
3. Disconnect transducer cables from J3 and J8 at board; see FIG. 12, page 37. Reverse A and B connections and check if status code follows the bad transducer, page 27.
4. Reconnect good transducer to proper connector. Disconnect failed transducer from board, and unscrew from base of fluid heater (heated units) or transducer manifold (nonheated units).
5. Install o-ring (60) on new transducer (58), FIG. 13.
6. Install transducer in heater or manifold. Mark board end of cable with tape (red=transducer A, blue=transducer B).
7. Route cable through channel to control module.
8. Connect transducer cable at board; see FIG. 12, page 37.


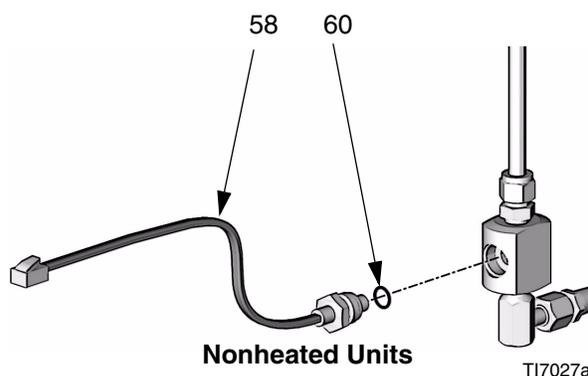


FIG. 13. Transducers

# Drive Housing

## Removal

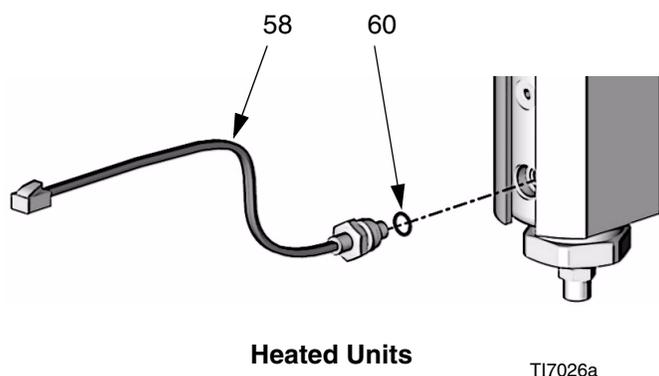

1. See **Before Beginning Repair**, page 31. Relieve pressure, page 22.
2. Remove screws (207) and end covers (221, 227), FIG. 14.

 Examine connecting rod (216). If rod needs replacing, first remove the pump (219), page 33.

**CAUTION**

Do not drop gear reducer (214) and crankshaft (210) when removing drive housing (215). These parts may stay engaged in motor end bell (MB) or may pull away with drive housing.

3. Disconnect pump inlet and outlet lines. Remove screws (220) and pull drive housing (215) off motor (201). Connecting rod (216) will disengage from crankshaft (210).
4. Examine crankshaft (210), gear reducer (214), thrust washers (208, 212), and bearings (209, 211, 213).

## Installation

1. Apply grease liberally to washers (208, 212), bearings (209, 211, 213), gear reducer (214), crankshaft (210), and inside drive housing (215). Grease is supplied with replacement parts kits.

 B side crankshaft (210) includes the cycle counter magnet (224). When reassembling, be sure to install crankshaft with magnet on B side.

If replacing crankshaft, remove magnet (224). Reinstall magnet in center of offset shaft on new crankshaft. Position shaft in Park position.

2. Install bronze bearings (211, 213) in drive housing (215), as shown.

3. Install bronze bearings (209, 211) and steel washer (208) on crankshaft (210). Install bronze bearing (213) and steel washer (212) on gear reducer (214).
4. Install gear reducer (214) and crankshaft (210) into motor end bell (MB).


 Crankshaft (210) must be in line with crankshaft at other end of motor. Pumps will move up and down together.

 If connecting rod (216) or pump (219) were removed, reassemble rod in housing and install pump, page 33.

5. Push drive housing (215) onto motor (201). Install screws (220).
6. Install drive housing covers (221 on A side, 227 on B side) and screws (207). Pumps must be in phase (both at same position in stroke).

## Cycle Counter Switch Replacement

 B side drive housing cover (227) includes the cycle counter switch (223), mounted in the cover. When reassembling, be sure to install cover with switch on B side.

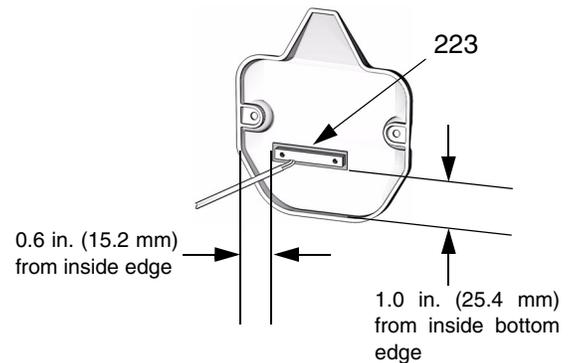

T17028a

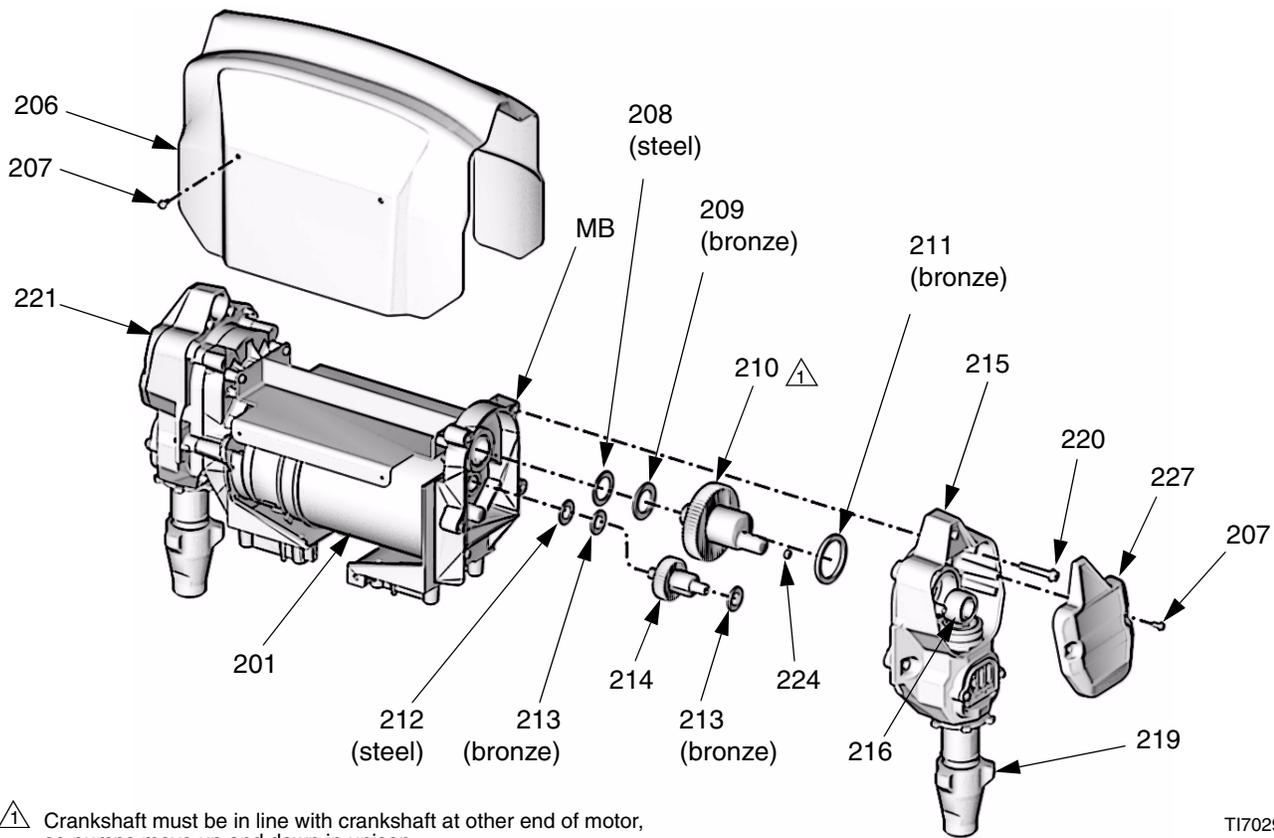


FIG. 14. Drive Housing

## Electric Motor

### Test Motor

If motor is not locked up by pumps, it can be tested using a 9 V battery. Disconnect J4 or J11 from control board, see FIG. 12, page 37. Touch jumpers from battery to motor connections. Motor should turn slowly.

### Removal

 If replacing a component with electrical cabling, remove one supply tank, page 31.



1. See **Before Beginning Repair**, page 31. Relieve pressure, page 22.
2. Remove four screws (207) and shroud (206). See FIG. 14.
3. Remove drive housing/pump assemblies, page 39.

4. Disconnect motor cables as follows:
  - a. Find control board at back of control module, see FIG. 12, page 37.
  - b. Unplug motor power connector from J4 (240 V units) or J11 (120 V units).
  - c. Unplug motor temp switch harness from connector J7.
  - d. Unplug cable (37) from fan (202). See FIG. 15.
  - e. Thread motor power switch harness out bottom of control module and cable channel, to free motor.

<b>CAUTION</b>
----------------

Motor is heavy. Two people may be required to lift.
---

5. Remove screws holding motor to bracket. Lift motor off unit.

### Installation

1. If replacing motor, install fan assembly and fan mount threaded bushing on new motor.
2. Place motor and fan on unit. Thread motor switch harness into control module.
3. Fasten motor with screws underneath. Do not tighten yet.
4. Plug 3-pin connector J7 to board.
5. Plug Motor Power switch harness to connector J4 (240 V units) or J11 (120 V units).
6. Install drive housing/pump assemblies, page 39. Reconnect inlet assemblies to pumps.
7. Tighten motor mounting screws.
8. Return to service.

## Motor Brushes

 Replace brushes worn to less than 1/2 in. (13 mm). Brushes wear differently on each side of motor; check both sides. Brush Repair Kit 248186 is available; kit includes instruction sheet 406582.


Motor commutator should be smooth. If not, resurface commutator or replace motor.



1. See **Before Beginning Repair**, page 31. Relieve pressure, page 22.
2. See instruction sheet 406582, included with Brush Repair Kit 248186. Remove old brushes and install new ones supplied in kit.

## Fan

1. Disconnect fan cable (37) from fan (202). With Motor Power on, test cable connector for line voltage (120 V or 240 V).
2. *If voltage is correct*, fan is defective. Remove screws holding fan to shield (206). Install new fan in reverse order.
3. *If voltage is not correct*, check fan cable connection at J9 on control board; see FIG. 12, page 37.

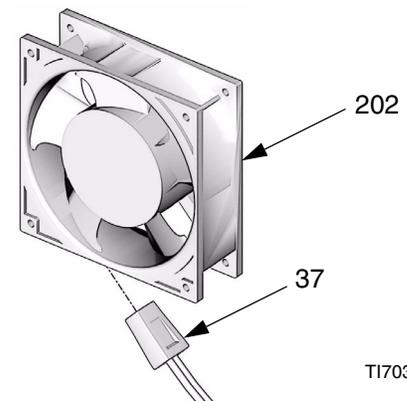

T17030a


**FIG. 15. Fan**

# Parts

**Part No. 249800, 120 V, 15 A, Heated Package**

**Part No. 249802, 240 V, 10 A, Heated Package**

**Part No. 249804, 240 V, 20 A, Heated Package**

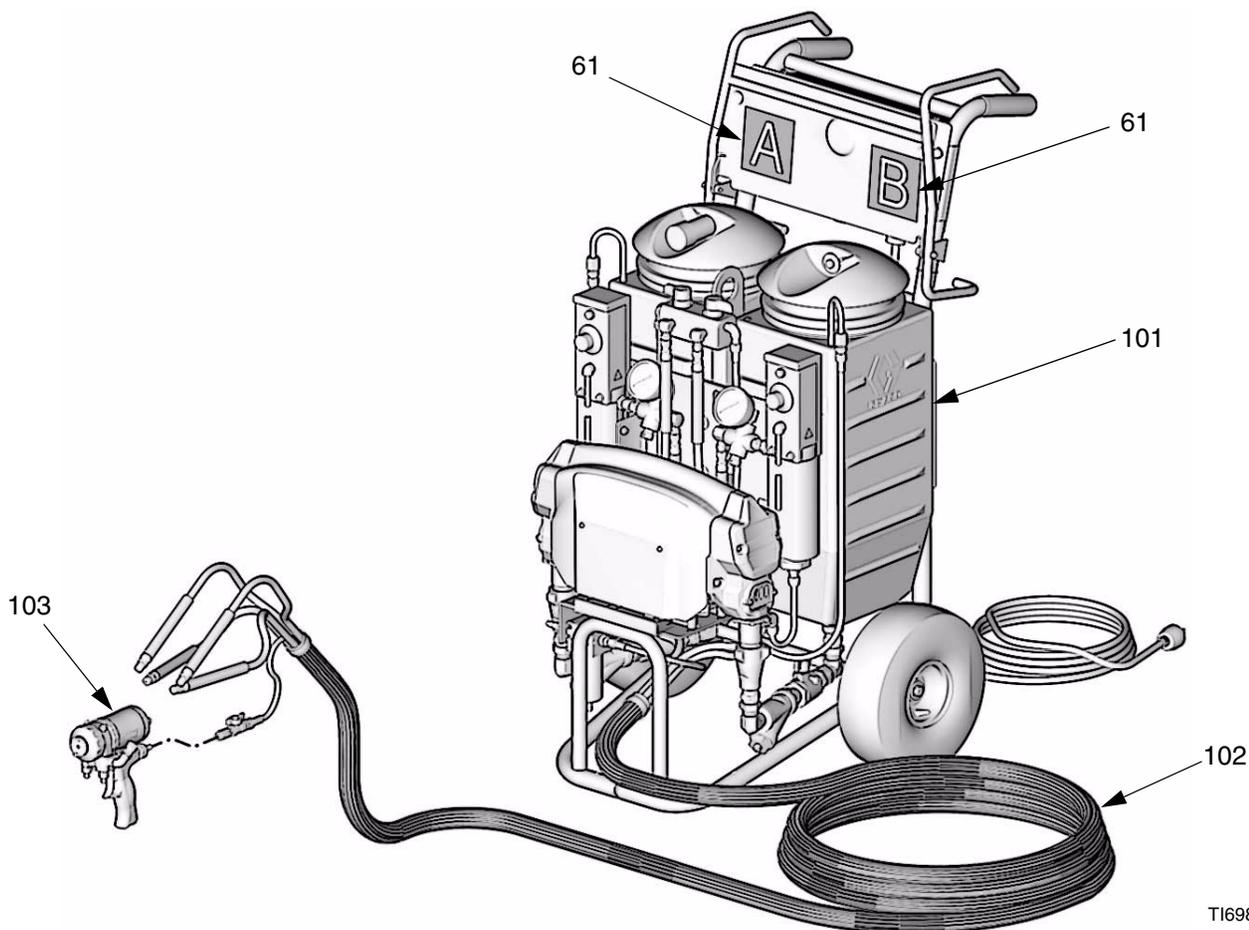


T16988b

Ref. No.	Part No.	Description	Qty	Ref. No.	Part No.	Description	Qty
101	249570	PROPORTIONER, heated, 120 V, 15 A; see page 44; 249800 only	1	102	249499	HOSE BUNDLE, insulated; see page 49	1
	249571	PROPORTIONER, heated, 240 V, 10 A; see page 44; 249802 only	1	103	249810	GUN, Fusion, air purge; see 309550	1
	249572	PROPORTIONER, heated, 240 V, 20 A; see page 44; 249804 only	1				

**Part No. 249806, 120 V, 15 A, Nonheated Package**

**Part No. 249808, 240 V, 10 A, Nonheated Package**

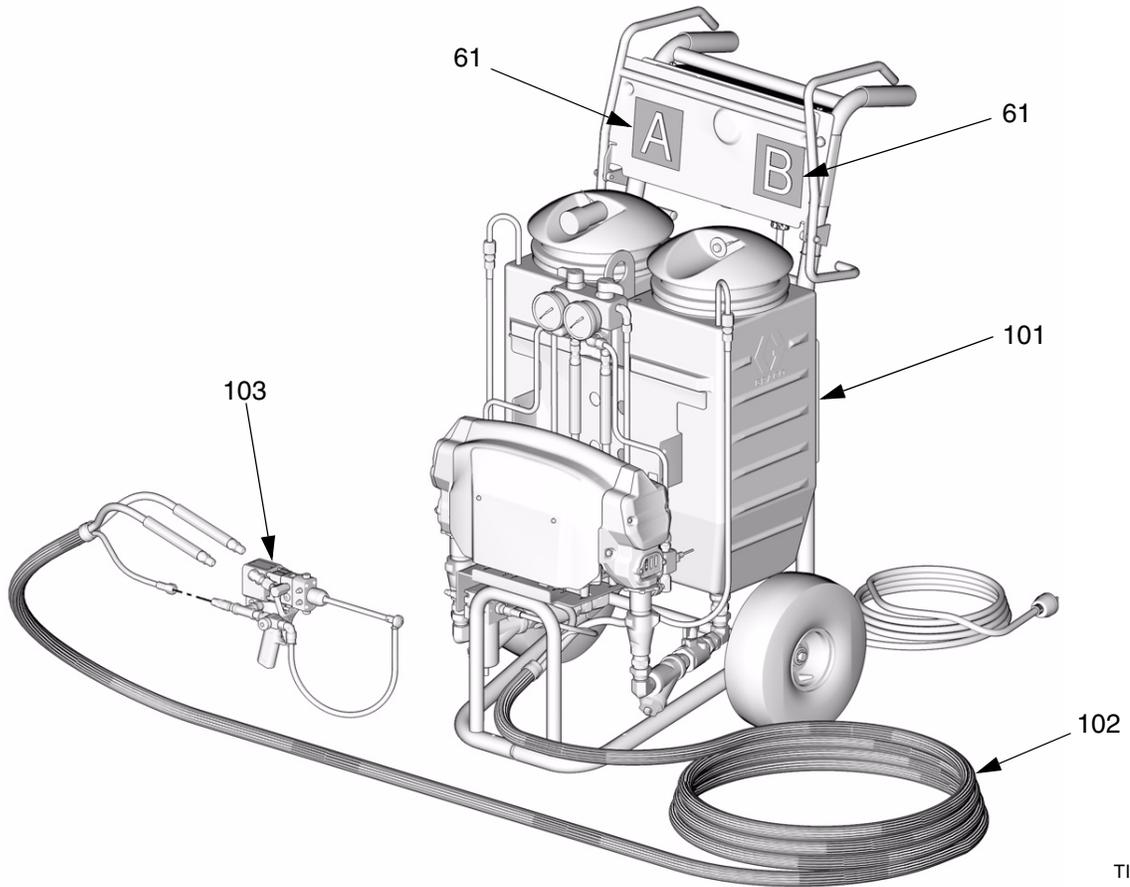


TI6990b

Ref. No.	Part No.	Description	Qty	Ref. No.	Part No.	Description	Qty
101	249576	PROPORTIONER, nonheated, 120 V, 15 A; see page 46; 249806 only	1	102	249633	HOSE BUNDLE, non-insulated; see page 49	1
	249577	PROPORTIONER, heated, 240 V, 10 A; see page 46; 249808 only	1	103	249834	GUN, 2K Ultra-Lite; see 309000 and 311230	1

Part No. 249570, 120 V, 15 A, Heated Proportioner

Part No. 249571, 240 V, 10 A, Heated Proportioner

Part No. 249572, 240 V, 20 A, Heated Proportioner

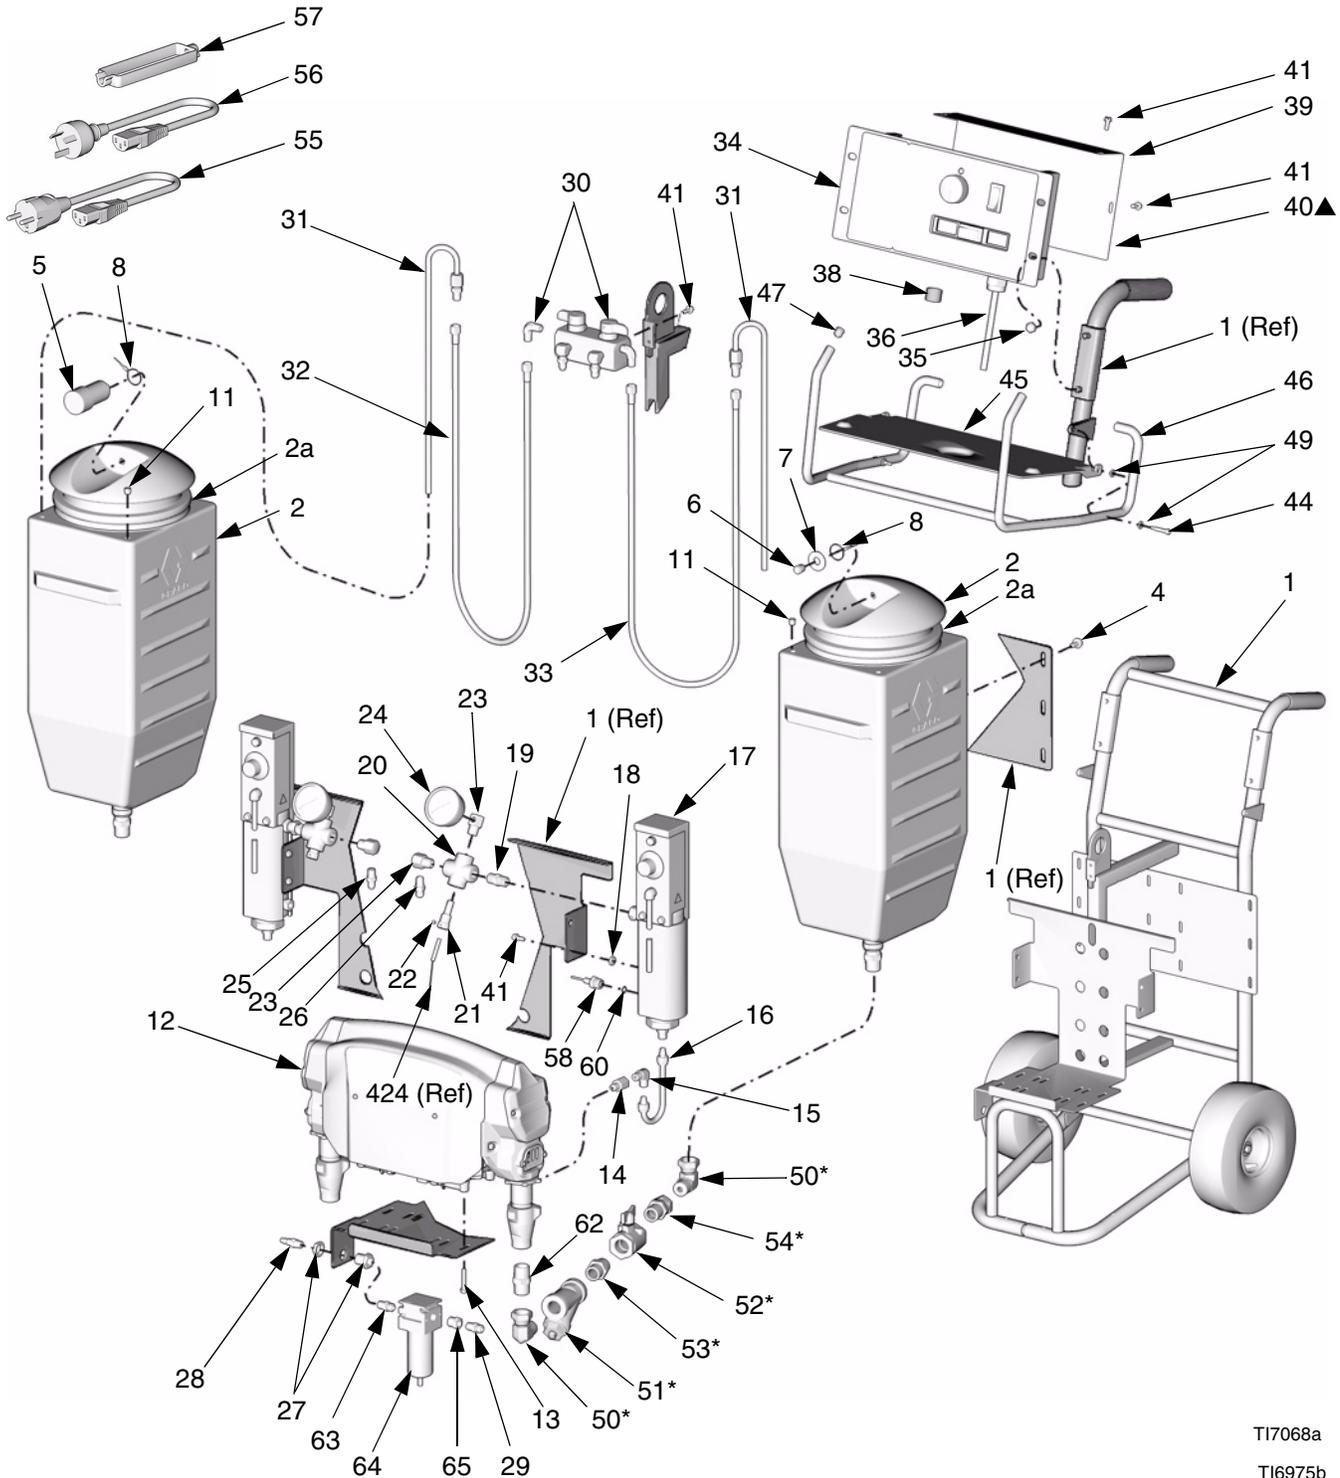

T17068a  
T16975b

## Heated Proportioners


Ref. No.	Part No.	Description	Qty	Ref. No.	Part No.	Description	Qty
1	249582	CART; see page 53	1	33	249630	HOSE, component B (RES); 1/4 in. (6 mm) ID; thermoplastic hose; 1/4 npsm(f) x 48 in. (1219 mm)	1
2	249438	TANK, with lid and outlet fitting; LDPE; includes item 2a	2	34	249556	DISPLAY, heated, 120 V; Model 249570; see page 50	1
2a	15F895	. O-RING, lid, tank	1		249557	DISPLAY, heated, 240 V; Models 249571 and 249572; see page 50	1
4	111800	SCREW, cap, hex hd; 5/16-18 x 5/8 in. (16 mm)	12	35	117623	NUT, cap; 3/8-16	4
5	119974	DRYER, desiccant; package of 2	1	36	15G218	CORD, 120 V; Model 249570	2
6	113037	MUFFLER, vent	1		15G220	CORD, 240 V; Model 249571	2
7	101044	WASHER, plain; 1/2 in. (13 mm)	1		15G219	CORD, 240 V; Model 249572	1
8	119973	LANYARD; 14 in. (356 mm); sst	2	37	15G458	CABLE, fan; see page 48	1
11	119993	PLUG	2	38		CONDUIT, flexible; non-metallic	1
12	287655	PROPORTIONER, bare, 120 V; Model 249570; see page 48	1	39	15G385	COVER, access, display	1
	287656	PROPORTIONER, bare, 240 V; Models 249571 and 249572; see page 48	1	40▲	15G280	LABEL, warning	1
13	117493	SCREW, machine, hex washer hd; 1/4-20 x 1-1/2 in. (38 mm)	4	41	108296	SCREW, machine, hex washer hd; 1/4-20 x 5/8 in. (16 mm)	10
14	116393	ADAPTER; 1/4 npt (m x f)	2	43	217374	LUBRICANT, ISO pump; not shown	1
15		ELBOW; 1/4 npt(m) x 3/8 (10 mm) OD tube	2	44		BOLT; 10-24 x 1 in. (25 mm)	2
16	15G114	TUBE, fluid, with ferrule and nuts; 3/8 in. (10 mm) OD; sst	2	45	15G119	GUARD, splash	1
17	287672	HEATER, fluid, 120 V; Model 249570; includes items 58 and 60; see 311210	2	46	15G461	RACK, hose	1
	287673	HEATER, fluid, 240 V; Models 249571 and 249572; includes items 58 and 60; see 311210	2	47		PLUG	4
18	167002	INSULATOR, heat	4	48	109510	STRAP, bungee; 25 in. (635 mm)	2
19	156849	NIPPLE; 3/8 npt	2	49		WASHER, flat; 1/4 in.; nylon	4
20	119874	CROSS; 3/8 npt(f); 4500 psi (31.5 MPa, 315 bar)	2	50*	160327	ELBOW, swivel; 3/4 npt(m) x 3/4 npsm(f)	2
21	15F692	HOUSING, thermowell	2	51*	101078	Y-STRAINER; includes item 51a	2
22	101118	SCREW, set; 10-24 x 1/4 in. (6 mm)	2	51a	180199	. ELEMENT, 20 mesh; not shown	1
23	164259	ELBOW; 3/8 npt(m) x 1/4 npt(f)	4	52*	109077	VALVE, ball; 3/4 npt (fbc)	2
24	113641	GAUGE, pressure, fluid; sst	2	53*	C20487	NIPPLE; 3/4 npt	2
25	119998	ADAPTER, A side; 1/2 JIC x 1/4 npt(m)	1	54*	157785	UNION, swivel; 3/4 npt(m) x 3/4 npsm(f)	2
26	116704	ADAPTER, B side; 9/16 JIC x 1/4 npt(m)	1	55	242001	ADAPTER, cord; Europe; Model 249571 only	2
27	104641	BULKHEAD FITTING	1	56	242005	ADAPTER, cord; Australia; Model 249571 only	2
28	169970	FITTING, air line; 1/4 npt(m)	1	57	195551	RETAINER, plug, adapter; Model 249571 only	2
29	162453	NIPPLE; 1/4 npt x 1/4 npsm	1	58	246123	TRANSDUCER, pressure; included with item 17	2
30	287712	MANIFOLD, recirculation, with valves; see page 52	1	60	111457	O-RING; ptfе; included with item 17	2
31	15G097	TUBE, recirculation; 3/8 (10 mm) OD; sst	2	61	15G476	LABEL, components A and B; see page 42	2
32	249629	HOSE, component A (ISO); 1/4 in. (6 mm) ID; thermoplastic hose with moisture guard; 1/4 npsm(f) x 48 in. (1219 mm)	1	62	119992	NIPPLE, pump inlet; 3/4 npt	2
				63	157350	NIPPLE; 1/4 npt x 3/8 npt	1
				64	117629	AIR FILTER/SEPARATOR, with 3/8 npt auto drain; includes item 2a	1
				64a	114228	. ELEMENT, 5 micron; polypropylene; not shown	1
				65	100176	BUSHING; 3/8 npt(m) x 1/4 npt(f)	1

\* Included in 287718 Pump Inlet Kit (one side).

▲ Replacement Danger and Warning labels, tags, and cards are available at no cost.

**Part No. 249576, 120 V, Nonheated Proportioner**

**Part No. 249577, 240 V, Nonheated Proportioner**

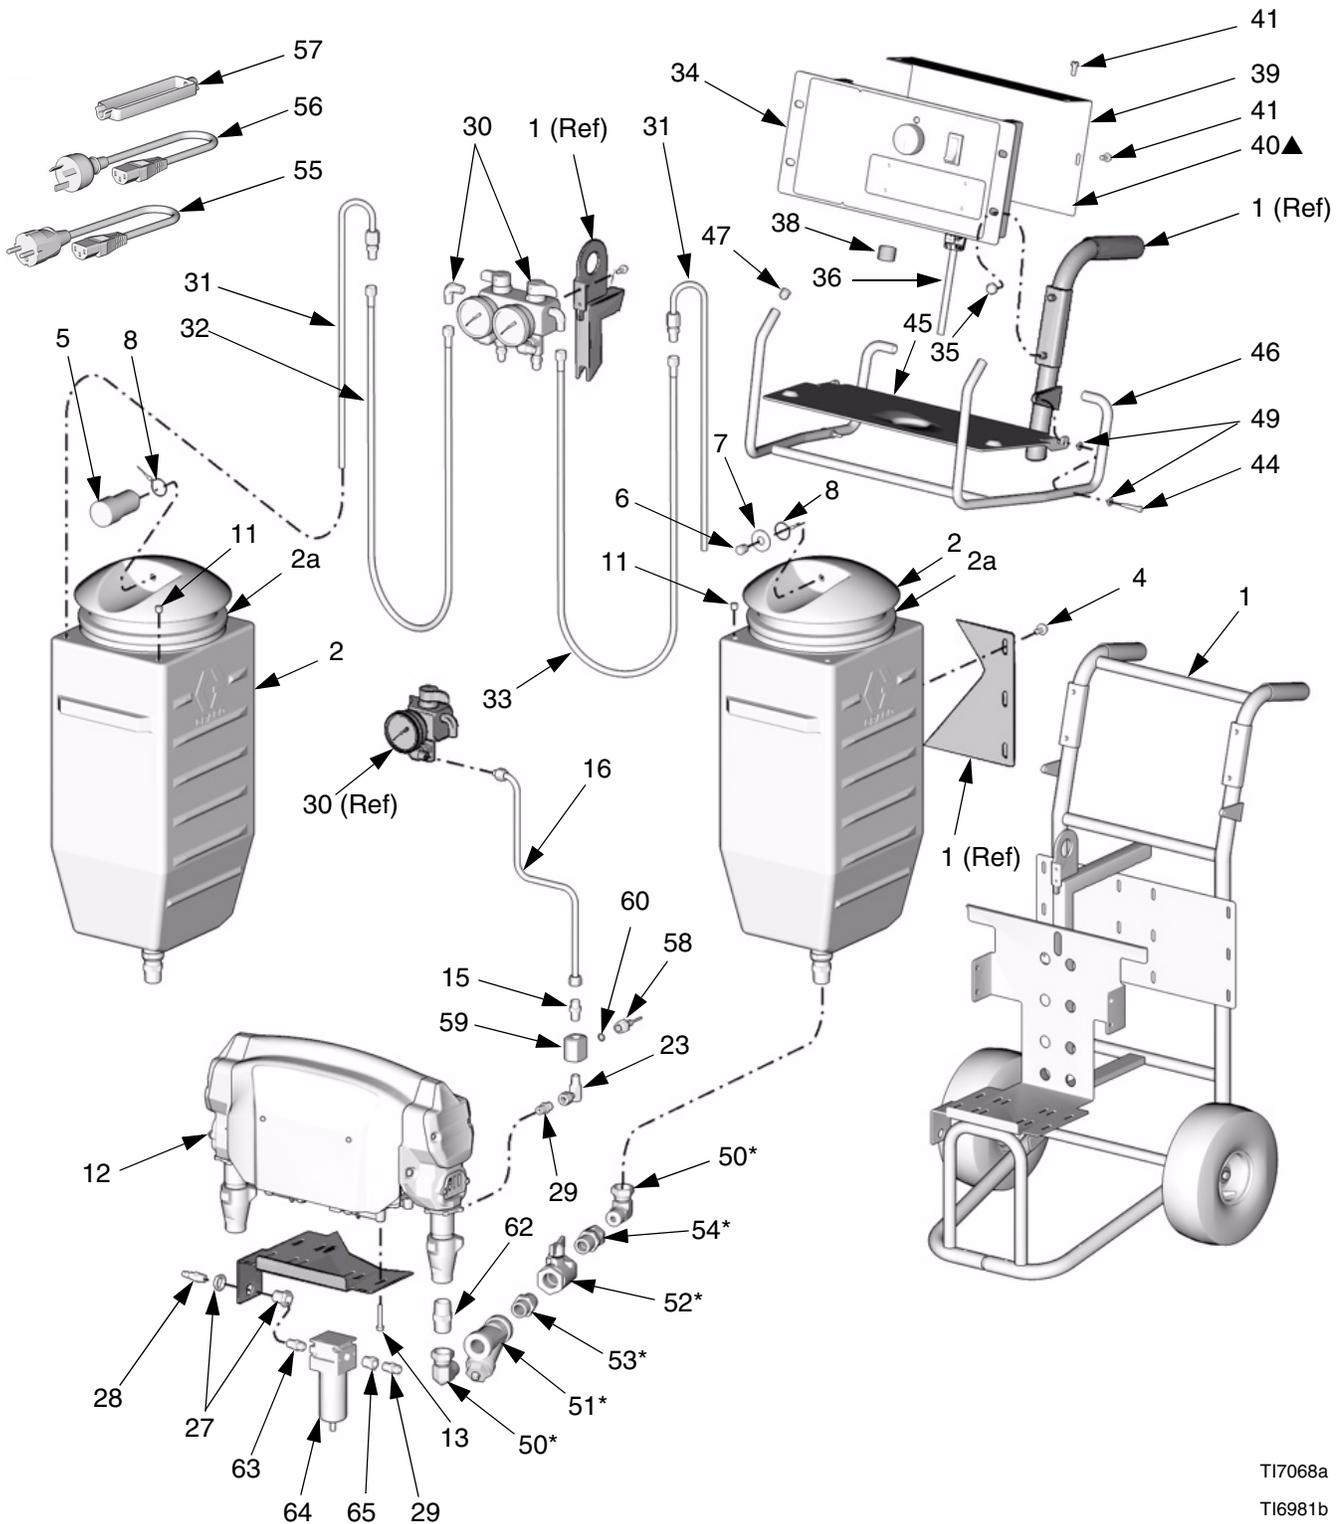

TI7068a  
TI6981b

## Nonheated Proportioners


Ref. No.	Part No.	Description	Qty	Ref. No.	Part No.	Description	Qty
1	249582	CART; see page 53	1	36	15G218	CORD, 120 V; Model 249576	1
2	249438	TANK, with lid and outlet fitting; LDPE; includes item 2a	2		15G220	CORD, 240 V; Model 249577	1
2a	15F895	. O-RING, lid, tank	1	37	15G458	CABLE, fan; see page 48	1
4	111800	SCREW, cap, hex hd; 5/16-18 x 5/8 in. (16 mm)	12	38		CONDUIT, flexible; non-metallic	1
5	119974	DRYER, desiccant; package of 2	1	39	15G385	COVER, access, display	1
6	113037	MUFFLER, vent	1	40▲	15G280	LABEL, warning	1
7	101044	WASHER, plain; 1/2 in. (13 mm)	1	41	108296	SCREW, machine, hex washer hd; 1/4-20 x 5/8 in. (16 mm)	6
8	119973	LANYARD; 14 in. (356 mm); sst	2	43	217374	LUBRICANT, ISO pump; not shown	1
11	119993	PLUG	2	44		BOLT; 10-24 x 1 in. (25 mm)	2
12	287655	PROPORTIONER, bare, 120 V; Model 249576; see page 48	1	45	15G119	GUARD, splash	1
	287656	PROPORTIONER, bare, 240 V; Model 249577; see page 48	1	46	15G461	RACK, hose	1
13	117493	SCREW, machine, hex washer hd; 1/4-20 x 1-1/2 in. (38 mm)	4	47		PLUG	4
15	119983	UNION; 1/4 npt(m) x 3/8 (10 mm) OD tube	2	48	109510	STRAP, bungee; 25 in. (635 mm)	2
16	15G296	TUBE, fluid, with ferrule and nuts; 3/8 in. (10 mm) OD; sst	2	49		WASHER, flat; 1/4 in.; nylon	4
23	155541	ELBOW, swivel; 1/4 npt(m) x 1/4 npsm(f)	2	50*	160327	ELBOW, swivel; 3/4 npt(m) x 3/4 npsm(f)	2
25	119998	ADAPTER, A side; 1/2 JIC x 1/4 npt(m)	1	51*	101078	Y-STRAINER; includes item 51a	2
26	116704	ADAPTER, B side; 9/16 JIC x 1/4 npt(m)	1	51a	180199	. ELEMENT, 20 mesh; not shown	1
27	104641	BULKHEAD FITTING	1	52*	109077	VALVE, ball; 3/4 npt (fbc)	2
28	169970	FITTING, air line; 1/4 npt(m)	1	53*	C20487	NIPPLE; 3/4 npt	2
29	162453	NIPPLE; 1/4 npt x 1/4 npsm	3	54*	157785	UNION, swivel; 3/4 npt(m) x 3/4 npsm(f)	2
30	287755	MANIFOLD, recirculation, with valves; see page 52	1	55	242001	ADAPTER, cord; Europe; Model 249577 only	1
31	15G097	TUBE, recirculation; 3/8 (10 mm) OD; sst	2	56	242005	ADAPTER, cord; Australia; Model 249577 only	1
32	249629	HOSE, component A (ISO); 1/4 in. (6 mm) ID; thermoplastic hose with moisture guard; 1/4 npsm(f) x 48 in. (1219 mm)	1	57	195551	RETAINER, plug, adapter; Model 249577 only	1
33	249630	HOSE, component B (RES); 1/4 in. (6 mm) ID; thermoplastic hose; 1/4 npsm(f) x 48 in. (1219 mm)	1	58	246123	TRANSDUCER, pressure	2
34	249537	DISPLAY, nonheated, 120 V; Model 249576; see page 51	1	59	15G292	MANIFOLD, pressure transducer	2
	249538	DISPLAY, nonheated, 240 V; Model 249577; see page 51	1	60	111457	O-RING; ptfe	2
35	117623	NUT, cap; 3/8-16	4	61	15G476	LABEL, components A and B; see page 43	2
				62	119992	NIPPLE; 3/4 npt	2
				63	157350	NIPPLE; 1/4 npt x 3/8 npt	1
				64	117629	AIR FILTER/SEPARATOR, with 3/8 npt auto drain; includes item 2a	1
				64a	114228	. ELEMENT, 5 micron; polypropylene; not shown	1
				65	100176	BUSHING; 3/8 npt(m) x 1/4 npt(f)	1

\* Included in 287718 Pump Inlet Kit (one side).

▲ Replacement Danger and Warning labels, tags, and cards are available at no cost.

**Part No. 287655, 120 V Bare Proportioner**

**Part No. 287656, 240 V Bare Proportioner**

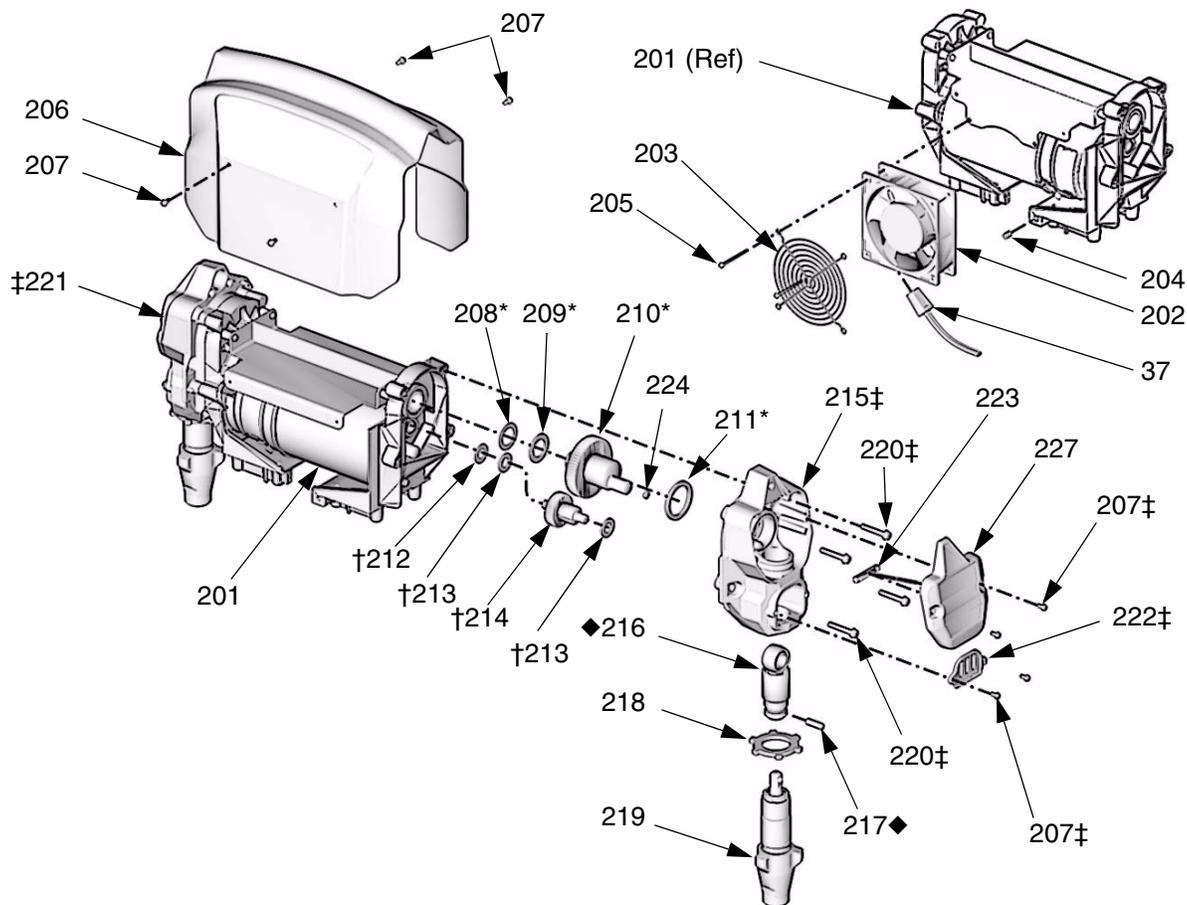


T16978a

Ref. No.	Part No.	Description	Qty
201	287650	MOTOR, electric; 120 V	1
	287651	MOTOR, electric; 240 V	
202	119994	FAN, cooling; 120 V	1
	119995	FAN, cooling; 240 V	1
203	115836	GUARD, finger	1
204		RIVET, blind; 5/32 x 3/8 grip	1
205		SCREW, machine, slotted hd; 8-32 x 2 in. (51 mm)	3
206	249518	SHIELD, proportioner	1
207‡	115492	SCREW, machine, hex washer hd; 8-32 x 3/8 in. (10 mm)	12
208*	116074	WASHER, thrust; steel	2
209*	107434	BEARING, thrust; bronze	2
210*	248231	CRANKSHAFT KIT	2
211*	180131	BEARING, thrust; bronze	2
212†	116073	WASHER, thrust; steel	2
213†	116079	BEARING, thrust; bronze	4
214†	287057	GEAR REDUCER KIT	2
215‡	287055	DRIVE HOUSING KIT	2
216◆	287053	CONNECTING ROD KIT	2

Ref. No.	Part No.	Description	Qty
217◆	196762	PIN, straight	2
218	195150	NUT, jam, pump	2
219	287657	PUMP, displacement; see 311076	2
220‡	117493	SCREW, machine, hex washer hd; 1/4-20 x 1-1/2 in. (38 mm)	8
221‡	15B254	COVER, drive housing, A side	1
222‡	15B589	COVER, pump rod	2
223	117770	SWITCH, reed, w/cable	1
224	119875	MAGNET	1
227	249854	COVER, drive housing, B side; includes item 223 and 228	1
228	115711	TAPE, mounting, reed switch; not shown	1

\* Included in 248231 Crankshaft Kit.  
 † Included in 287057 Gear Reducer Kit.  
 ‡ Included in 287055 Drive Housing Kit.  
 ◆ Included in 287053 Connecting Rod Kit.


**Part No. 249499, Insulated Hose Bundle with recirculation lines**

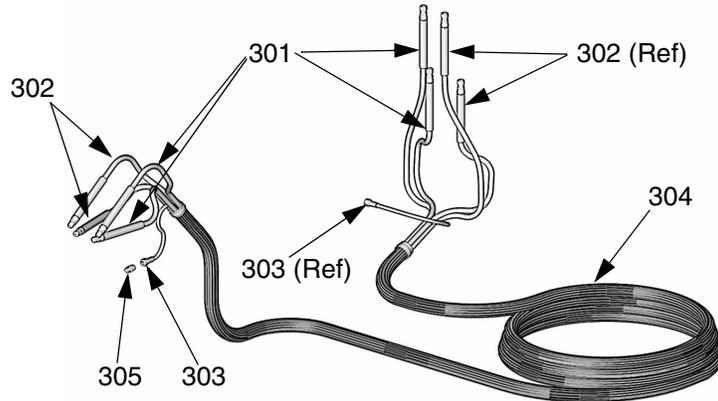

TI6991a


Ref. No.	Part No.	Description	Qty	Ref. No.	Part No.	Description	Qty
				303	15G342	HOSE, air; 1/4 in. (6 mm) ID; 1/4 npsm (fbe); 35 ft (10.7 m)	1
301	249508	HOSE, fluid (component A), moisture guard; 1/4 in. (6 mm) ID; no. 5 JIC fittings (mxf); 35 ft (10.7 m)	2	304	buy locally	TUBE, foam, insulated; 1-3/8 in. (35 mm) ID; 31 ft (9.5 m)	1
302	249509	HOSE, fluid (component B); 1/4 in. (6 mm) ID; no. 6 JIC fittings (mxf); 35 ft (10.7 m)	2	305	156971	NIPPLE; 1/4 npt; for joining air line to another hose bundle	1

**Part No. 249633, Non-insulated Hose Bundle without recirculation lines**

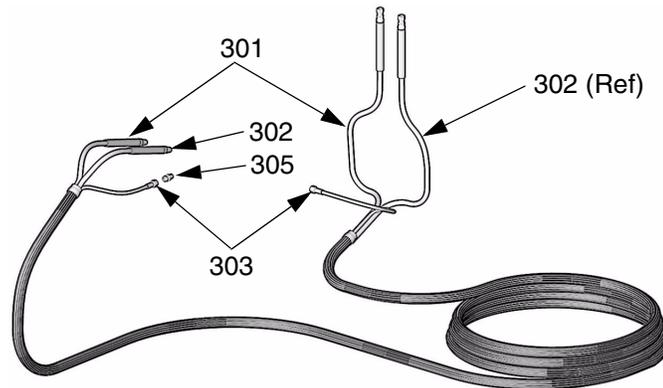

TI6992a

Ref. No.	Part No.	Description	Qty	Ref. No.	Part No.	Description	Qty
				303	15G342	HOSE, air; 1/4 in. (6 mm) ID; 1/4 npsm (fbe); 35 ft (10.7 m)	1
301	249508	HOSE, fluid (component A), moisture guard; 1/4 in. (6 mm) ID; no. 5 JIC fittings (mxf); 35 ft (10.7 m)	1	305	156971	NIPPLE; 1/4 npt; for joining air line to another hose bundle	1
302	249509	HOSE, fluid (component B); 1/4 in. (6 mm) ID; no. 6 JIC fittings (mxf); 35 ft (10.7 m)	1				

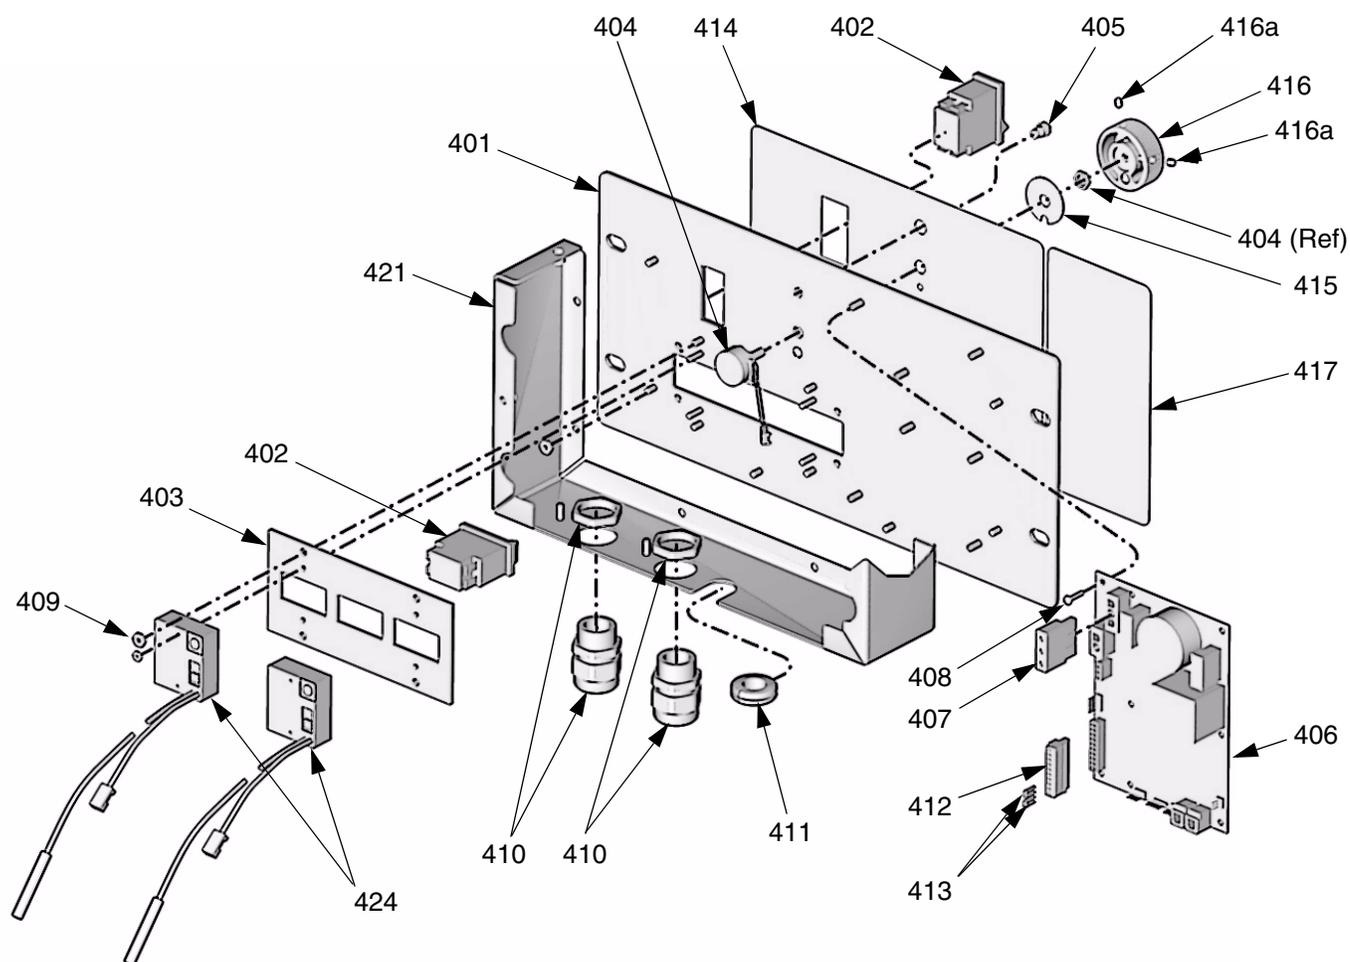
**Part No. 249556, 120 V Heated Display****Part No. 249557, 240 V Heated Display**

T16979a

Ref. No.	Part No.	Description	Qty	Ref. No.	Part No.	Description	Qty
401	15F984	PLATE	1	411	101765	GROMMET	1
402	119927	SWITCH, motor or heater power, with circuit breaker	2	412	116773	CONNECTOR, plug	1
403	249567	MODULE, display, temperature; includes (1) item 402 and (2) item 424	1	413	15C866	WIRE, jumper	2
404	249494	POTENTIOMETER	1	414	15G279	LABEL, display	1
405	119930	INDICATOR, status, LED	1	415	15G053	PLATE, detent	1
406	249434	BOARD, control; 120 V units only	1	416	249453	KNOB, function; includes item 416a	1
	249432	BOARD, control; 240 V units only	1	416a	101118	SCREW, set; no. 10 x 1/4 in. (6 mm)	2
407	15G230	CABLE, harness	1	417	15G454	LABEL, startup, heated	1
408	107156	SCREW, machine, pan hd	7	421	15G384	ENCLOSURE	1
409	113505	NUT, keps, hex hd	10	424	119869	DISPLAY, temperature, with sensor	2
410	119898	BULKHEAD FITTING, cable	2	425		DUAL TERMINAL; not shown	2

**Part No. 249537, 120 V Nonheated Display**


**Part No. 249538, 240 V Nonheated Display**

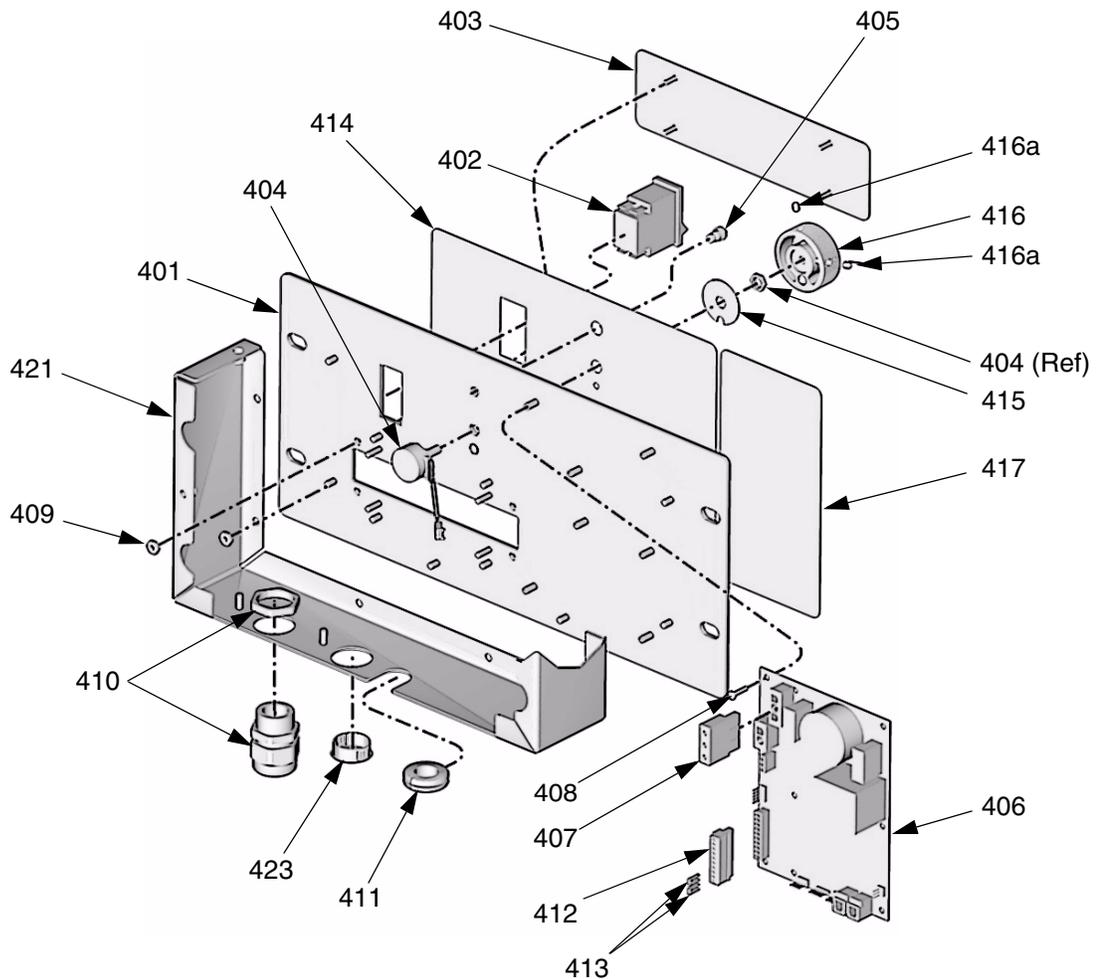

T16983a

Ref. No.	Part No.	Description	Qty	Ref. No.	Part No.	Description	Qty
401	15F984	PLATE	1	414	15G279	LABEL, display	1
402	119927	SWITCH, motor power, with circuit breaker	1	415	15G053	PLATE, detent	1
403	15G408	COVER, display	1	416	249453	KNOB, function; includes item 416a	1
404	249494	POTENTIOMETER	1	416a	101118	SCREW, set; no. 10 x 1/4 in. (6 mm)	2
405	119930	INDICATOR, status, LED	1	417	15G281	LABEL, startup, unheated	1
406	249434	BOARD, control; 120 V units only	1	421	15G384	ENCLOSURE	1
	249432	BOARD, control; 240 V units only	1	423		PLUG	1
407	15G230	CABLE, harness	1				
408	107156	SCREW, machine, pan hd	7				
409	113505	NUT, keps, hex hd	10				
410	119897	BULKHEAD FITTING, cable	1				
411	101765	GROMMET	1				
412	116773	CONNECTOR, plug	1				
413		WIRE, jumper	2				

**Part No. 287712 Recirculation Manifold, Heated Models**

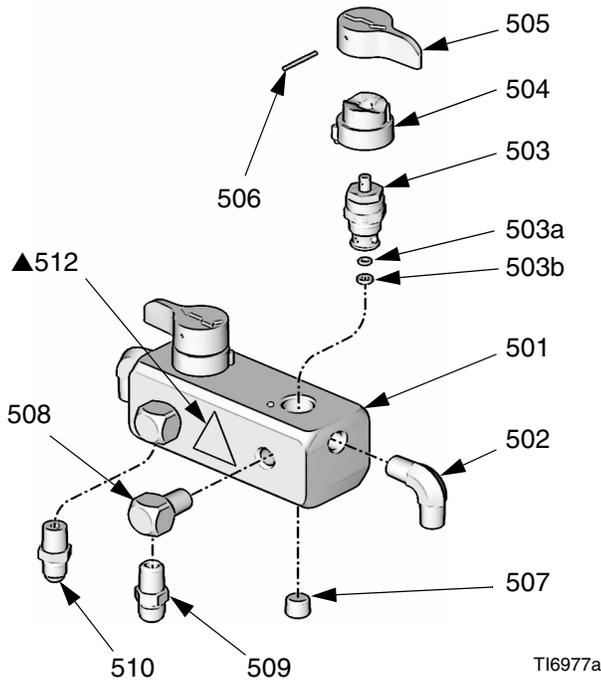


Ref. No.	Part No.	Description	Qty
501	15F870	MANIFOLD, recirculation	1
502	111763	ELBOW; 1/4 npt (mbe)	2
503	239914	VALVE, recirc/spray; includes items 503a, 503b	2
503a	15E022	. SEAT	1
503b	111699	. GASKET	1
504	224807	BASE, valve	2
505	187625	HANDLE, valve, drain	2
506	111600	PIN, grooved	2
507	100721	PLUG, pipe; 1/4 npt(m)	2
508	100840	ELBOW, street; 1/4 npt(m) x 1/4 npsm(f)	2
509	116704	ADAPTER; 9/16-18 JIC x 1/4 npt(m)	1
510	119998	ADAPTER; 1/2-18 JIC x 1/4 npt(m)	1
512▲	189285	LABEL, warning	1

▲ Replacement Danger and Warning labels, tags, and cards are available at no cost.

T16977a


**Part No. 287755 Recirculation Manifold, Nonheated Models**

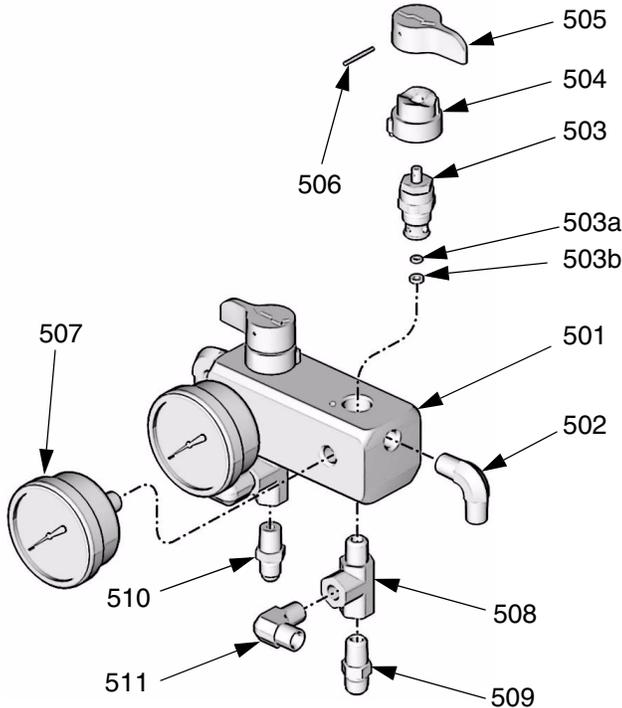

Ref. No.	Part No.	Description	Qty
501	15F870	MANIFOLD, recirculation	1
502	111763	ELBOW; 1/4 npt (mbe)	4
503	239914	VALVE, recirc/spray; includes items 503a, 503b	2
503a	15E022	. SEAT	1
503b	111699	. GASKET	1
504	224807	BASE, valve	2
505	187625	HANDLE, valve, drain	2
506	111600	PIN, grooved	2
507	113641	GAUGE, pressure, fluid	2
508	116504	TEE; 1/4 npt(m) x 1/4 npt(f) run; 1/4 npt(f) branch	2
509	116704	ADAPTER; 9/16-18 JIC x 1/4 npt(m)	1
510	119998	ADAPTER; 1/2-18 JIC x 1/4 npt(m)	1
511		ELBOW, tube; 1/4 npt(m) x 3/8 in. (10 mm) OD tube	2

T16982a

**Part No. 249582, Cart**

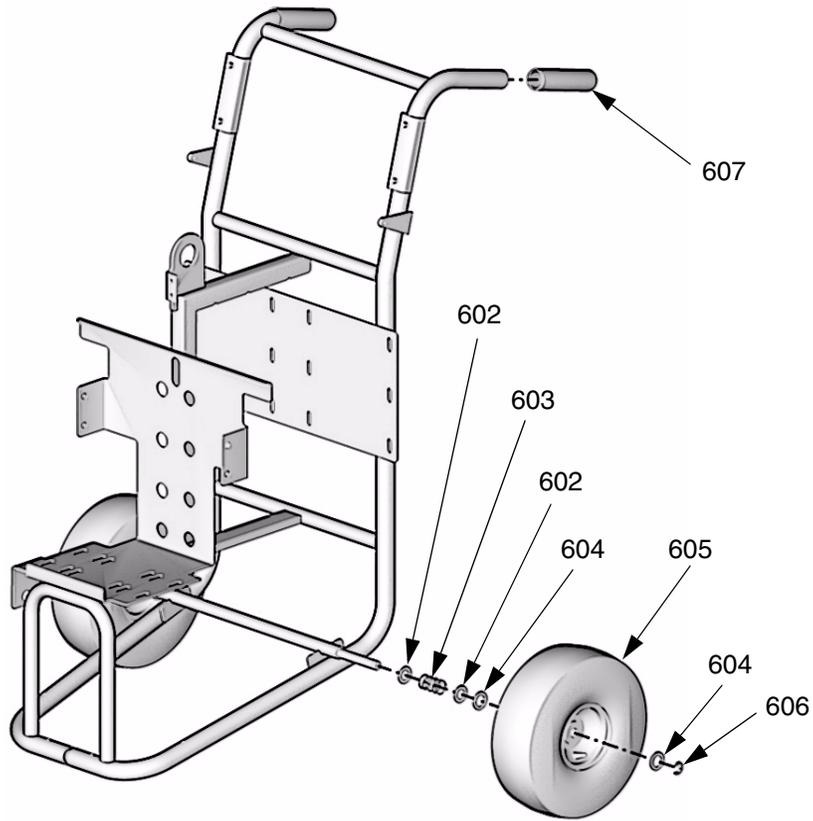

T16976a

Ref. No.	Part No.	Description	Qty
602	154636	WASHER, flat	4
603	116411	SPRING	2
604	116477	WASHER, flat; nylon	4
605	116478	WHEEL, pneumatic	2
606	101242	RING, retaining	2
607		GRIP, handle	2

# Suggested Spare Replacement Parts

Keep the following spare parts on hand to reduce downtime.

## All Units

### Part No. Description

119974	DRYER, desiccant; package of 2
15F895	O-RING, lid, tank
119927	SWITCH, motor or heater power, with circuit breaker
113641	GAUGE, pressure, fluid; sst
101078	Y-STRAINER; includes 180199 element
180199	ELEMENT, Y-strainer, 20 mesh
114228	ELEMENT, air filter, 5 micron; polypropylene
239914	VALVE, recirc/spray; includes seat and gasket
249494	POTENTIOMETER, control knob
249434	BOARD, control; 120 V units only
249432	BOARD, control; 240 V units only
246123	TRANSDUCER, pressure
287657	PUMP, displacement; fits either side
287718	INLET KIT, tank to pump
249855	REPAIR KIT, displacement pump; includes seals, balls, bearings, intake valve seat)


## Heated Units Only

### Part No. Description

119869	DISPLAY, temperature, with sensor
119857	FUSE, heater over-temperature
119797	THERMOSTAT, heater
15F770	HEATER ELEMENT; 120 V units only
15F771	HEATER ELEMENT; 240 V units only

# Dimensions

All Models

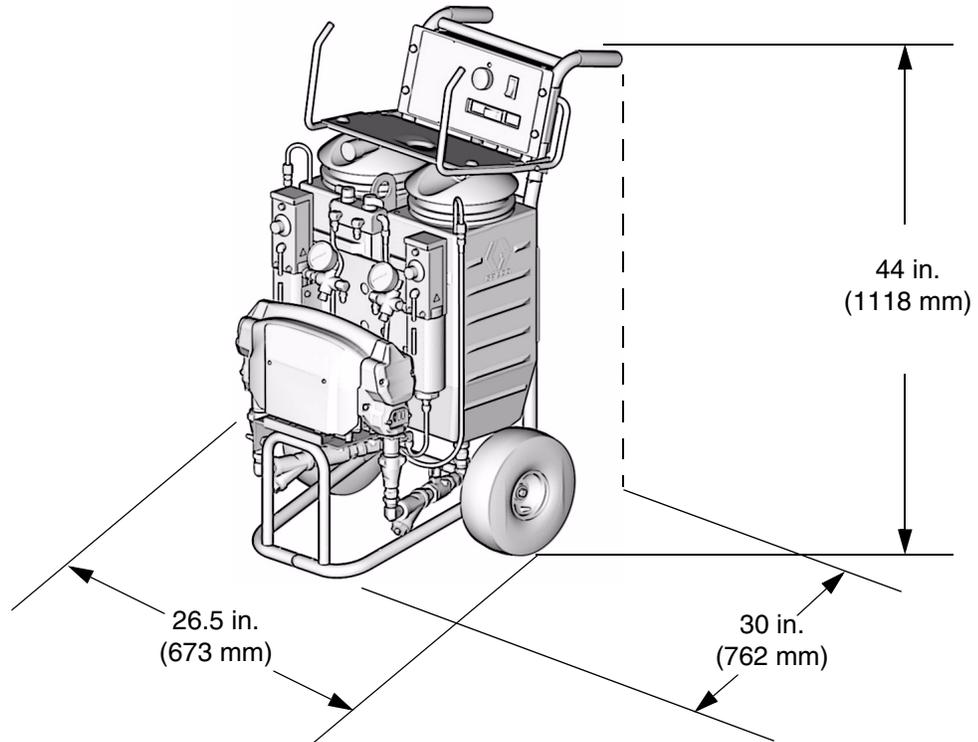

TI6974a

# Technical Data

Maximum fluid working pressure	2000 psi (14 MPa, 140 bar)
Electrical requirements	<p><i>Model 249800:</i> 120 Vac, 1 phase, 50/60 Hz, 3500 W; requires two separate, dedicated 15 A circuits</p> <p><i>Model 249802:</i> 240 Vac, 1 phase, 50/60 Hz, 3800 W; requires two separate, dedicated 10 A circuits</p> <p><i>Model 249804:</i> 240 Vac, 1 phase, 50/60 Hz, 3800 W; requires a single dedicated 16 A circuit</p> <p><i>Model 249806:</i> 120 Vac, 1 phase, 50/60 Hz, 1800 W; requires a single dedicated 15 A circuit</p> <p><i>Model 249808:</i> 240 Vac, 1 phase, 50/60 Hz, 1800 W; requires a single dedicated 8 A circuit</p>
Generator Size (for Reactor E-10 only)	<p><i>Heated:</i> 5000 W minimum</p> <p><i>Nonheated:</i> 2500 W minimum</p>
Maximum Fluid Temperature	160°F (71°C)
Maximum Ambient Temperature	110°F (43°C)
Maximum Output	12 lb/min (5.4 kg/min) at 340 cycles/min
Output per Cycle (A and B)	.00352 gal. (.0133 liter)
Overpressure Relief	Recirc/Spray valves automatically relieve excessive fluid pressure back to supply tanks
Heater Power	<p><i>120V models:</i> 850 W each; 1700 W total</p> <p><i>240V models:</i> 1000 W each; 2000 W total</p>
Sound Pressure	<p>78.7 dB(A) in fast circulation mode</p> <p>84.5 dB(A) at 2000 psi (14 MPa, 140 bar), 0.72 gpm (2.7 lpm)</p>
Sound Power, per ISO 9614-2	<p>88.6 dB(A) in fast circulation mode</p> <p>94.4 dB(A) at 2000 psi (14 MPa, 140 bar), 0.72 gpm (2.7 lpm)</p>

Tank Capacity	7 gal. (26.5 liters) each (nominal)
Fluid Outlets	<i>Component A (ISO): #5 JIC (1/2-18) male</i> <i>Component B (RES): #6 JIC (9/16-18) male</i>
Fluid Circulation Returns	<i>Component A (ISO): #5 JIC (1/2-18) male</i> <i>Component B (RES): #6 JIC (9/16-18) male</i>
Air Inlet	1/4 in. quick-disconnect industrial type pin fitting
Air Outlet	1/4 npsm(m)
Gun Compressed Air Requirements	Fusion Gun (purge air and operating air): 4 scfm (0.112 m <sup>3</sup> /min) 2K Ultra-Lite Gun with disposable mixer kit: 14 scfm (0.392 m <sup>3</sup> /min), with air spray valve fully open 2K Ultra-Lite Gun with joint fill kit: 2 scfm (.056 m <sup>3</sup> /min)
Hose Markings	<i>A Side: Red</i> <i>B Side: Blue</i>
Weight (empty)	approximately 160 lb (72 kg), depending on model
Wetted Parts	Aluminum, stainless steel, carbon steel, brass, carbide, chrome, chemically resistant o-rings, PTFE, ultra-high molecular weight polyethylene

*All other brand names or marks are used for identification purposes and are trademarks of their respective owners.*

# Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

**THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.**

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

**GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO.** These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

## **FOR GRACO CANADA CUSTOMERS**

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

# Graco Information

**TO PLACE AN ORDER**, contact your Graco distributor or call to identify the nearest distributor.

**Phone:** 612-623-6921 **or Toll Free:** 1-800-328-0211 **Fax:** 612-378-3505

*All written and visual data contained in this document reflects the latest product information available at the time of publication.  
Graco reserves the right to make changes at any time without notice.*

MM 311075

**Graco Headquarters:** Minneapolis  
**International Offices:** Belgium, China, Japan, Korea

**GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441**  
www.graco.com  
311075E 6/2006